


User manual

e.base XT

Extension kit

1.240.233

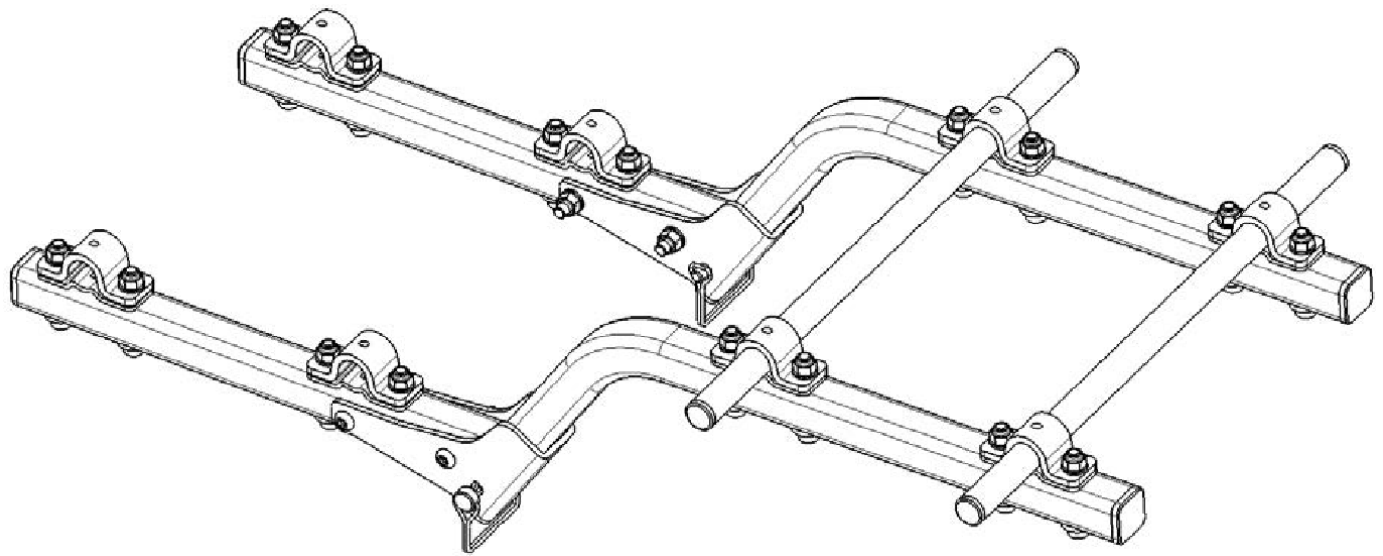

Minnid
Jopindo GmbH
Massenheimer Weg 25
D-61352 Bad Homburg
www.minnid.com

Single-language edition

Contents

Document and safety	3
Safe use	4
Before every journey	5
While driving	6
Product and accessories	7
Component overview	8
Installation e.base XT	9
Illustrations Installation	10
Payload and side marker lights e.base XT	11
Remove loose parts before driving e.base XT	12
Product warranty	13
Manufacturer and contact	14

Document and safety

These instructions form part of the product. Read them in full, follow all safety instructions and keep them accessible. Also follow the instructions for the vehicle, all carriers and accessories used, and the information on the type plate. Copyright protected; reproduction, reprinting and distribution require permission. Subject to change.

WARNING: a hazardous situation that may cause death or serious injury.

CAUTION: a situation that may cause minor or moderate injury.

NOTICE: a situation that may cause damage to property or the environment.

Symbols in the illustrations: red cross = incorrect; green tick = correct; eye = visual check. Numbers and arrows show the sequence and direction of movement. Letters identify components. Follow the actions in the order given in the text.

Safe use

Maximum carrying capacity: 75 kg

Failure to follow these instructions may cause injury or accidents. Use the product only when correctly installed and in perfect technical condition, on paved roads. Off-road use is prohibited. Do not use a damaged or independently modified product. Children and people unable to assess the hazards must not operate it. Any use other than that described is improper use.

e.base XT is intended exclusively for attachment to e.base and carrying accessories. Maximum carrying capacity: 75 kg. The side marker lights must be fitted to e.base before driving.

The driver is responsible for the vehicle and its load. National rules for securing and marking loads (e.g. a warning panel) take precedence and must always be followed. Do not exceed the vehicle's permissible axle loads or gross weight; consult the vehicle manual and registration documents. Also observe the load limits of every component used.

The manufacturer accepts no liability or warranty for damage caused by failure to follow the instructions, improper use or handling, unauthorised spare parts or unqualified repairs.

Before every journey

Check that the system and all accessories are correctly secured. Lock every lock. The lights and registration plate must be clearly visible from behind, and the driver must have an unobstructed view in every direction. If the vehicle's third brake light is obscured, fit a replacement third brake light. Place heavy luggage as far forward as possible in the luggage compartment to reduce rear loading.

If the load projects more than 380 mm sideways beyond the lamp carrier, adjust the lamp position where adjustable. If adjustment is insufficient, mark the load with a white light facing forwards and a red light facing rearwards, no more than 1500 mm above the road. Follow national regulations.

When carrying nothing, remove the detachable system and carry it, for example, in the luggage compartment. This reduces fuel consumption, makes parking easier and protects the product.

While driving

Observe the load regularly in the rear-view mirror. If it shifts, drive at reduced speed to the next suitable stopping place and check the attachments. Maximum speed: 130 km/h. Expect greater sensitivity to crosswinds and altered braking behaviour due to the load distribution. Do not drive off-road or enter a car wash with the system fitted. Check the system, accessories and load after approximately 10 km and every 500 km on longer journeys; check sooner on uneven roads.

Product and accessories


Check the delivery is complete: e.base XT assembly kit and instructions.

Article / type	e.base XT 1.240.233
Maximum carrying capacity	75 kg
Own weight	9 kg

Product and accessories

e.base	1.240.160
e.hit 120	1.240.060
e.hit 150	1.240.400
e.carry	1.240.070
e.box	1.240.344

Component overview

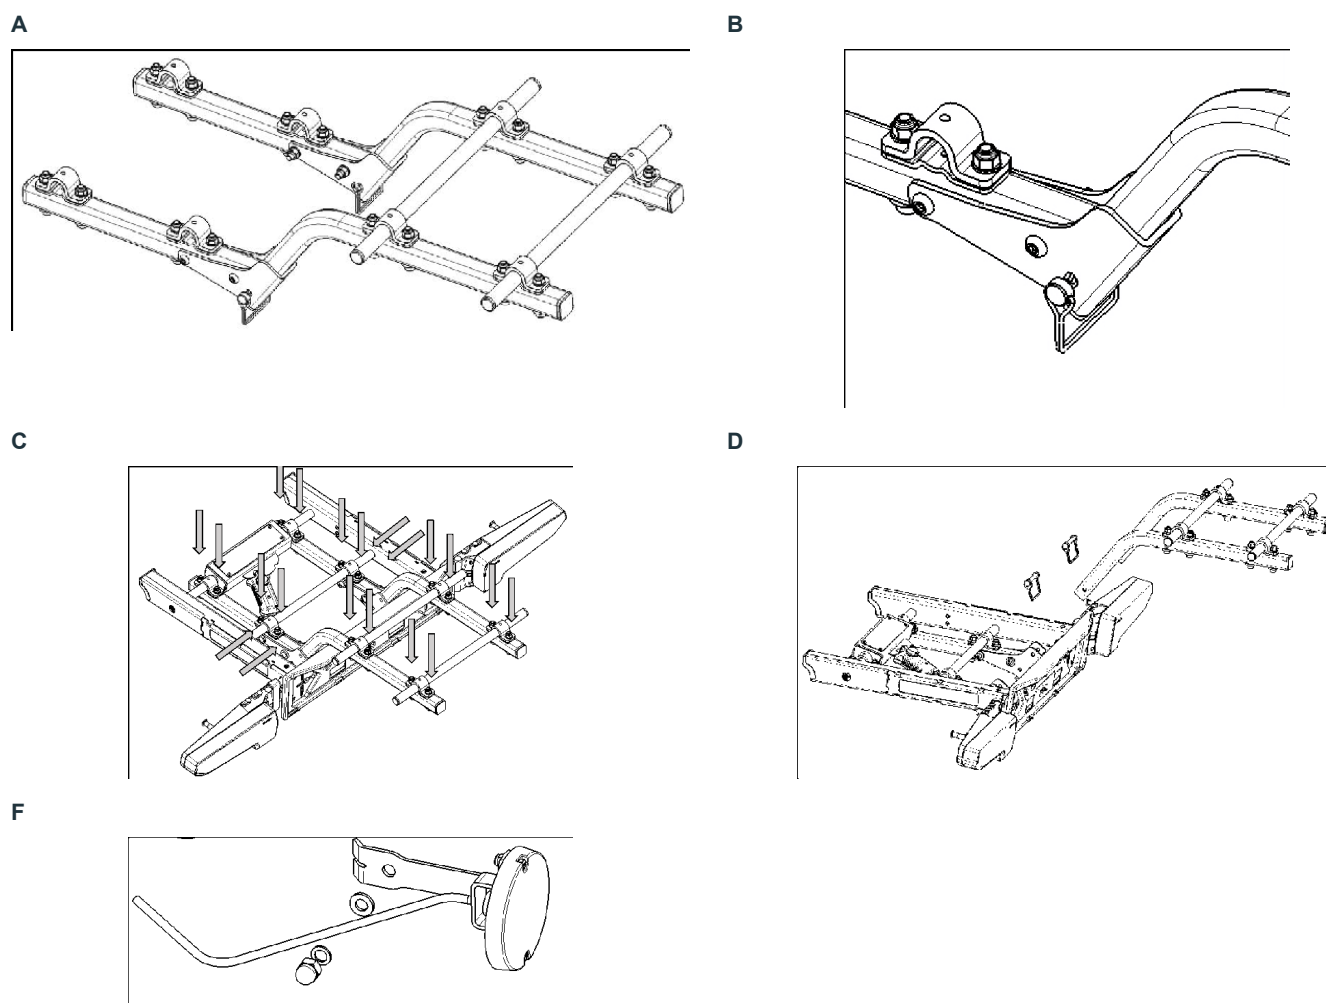

A e.base XT

B Linchpins

C Bolted connections (20×)


D Removable section

E Type plate


F Side marker lights (2×)

Installation | e.base XT


A

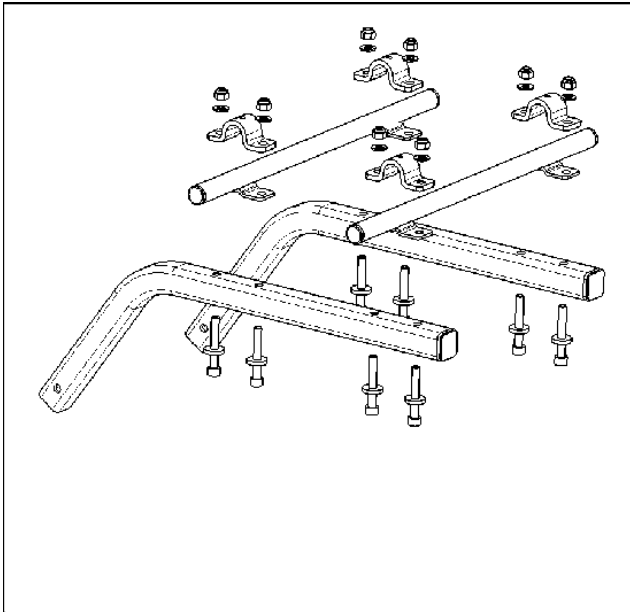

B

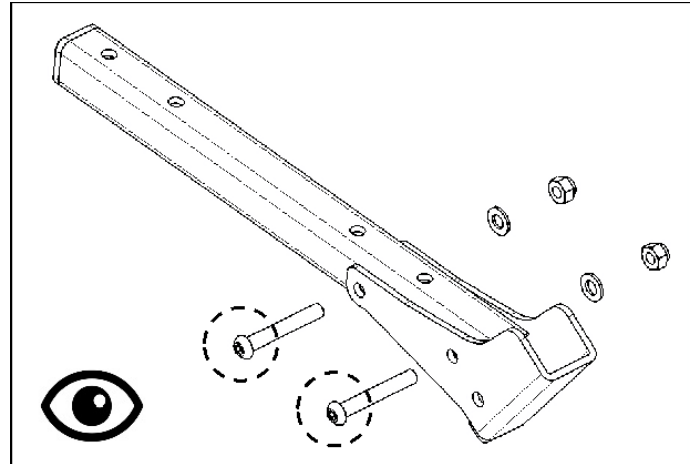


C

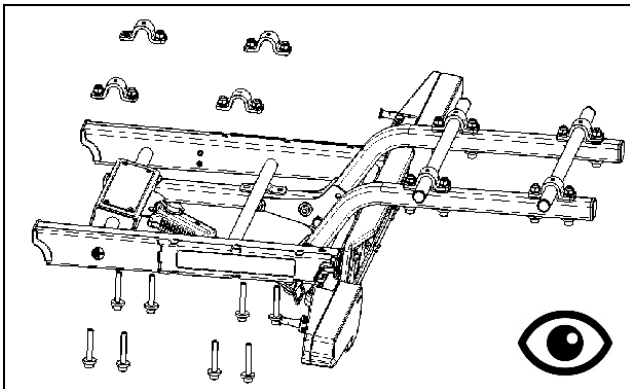


1. Bolt together the removable section and the fixed section. Bolt heads must always be on the outside.
 2. Bolt e.base XT centrally to e.base. Use e.carry to check that the position is correct. Tighten all bolts to 20 Nm.
 3. Insert and secure both linchpins.
- Before use: check that all bolted connections are tight. Both linchpins must be in their holes with the spring rings engaged.

Illustrations | Installation


D

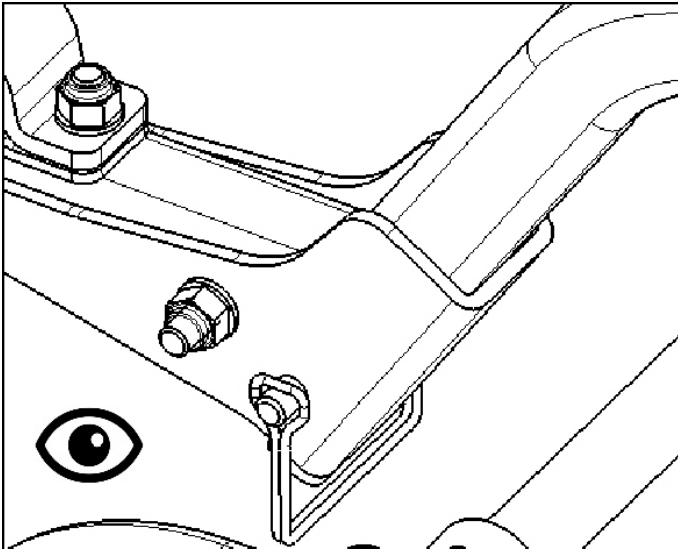


E

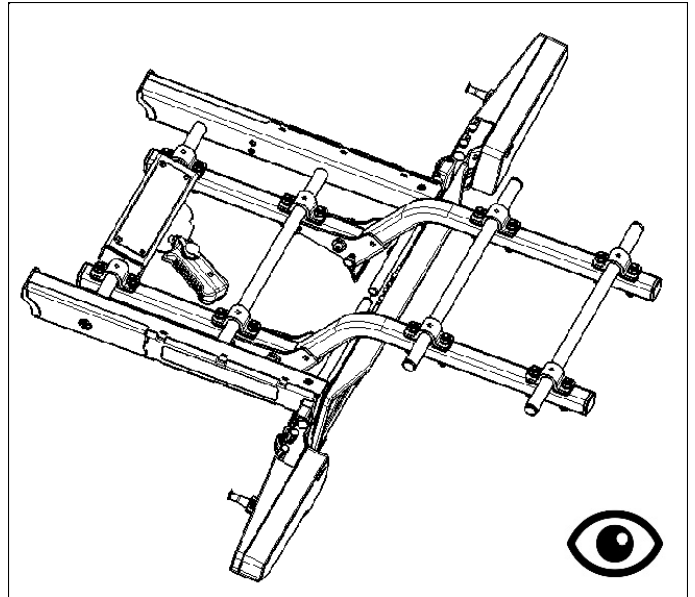

F

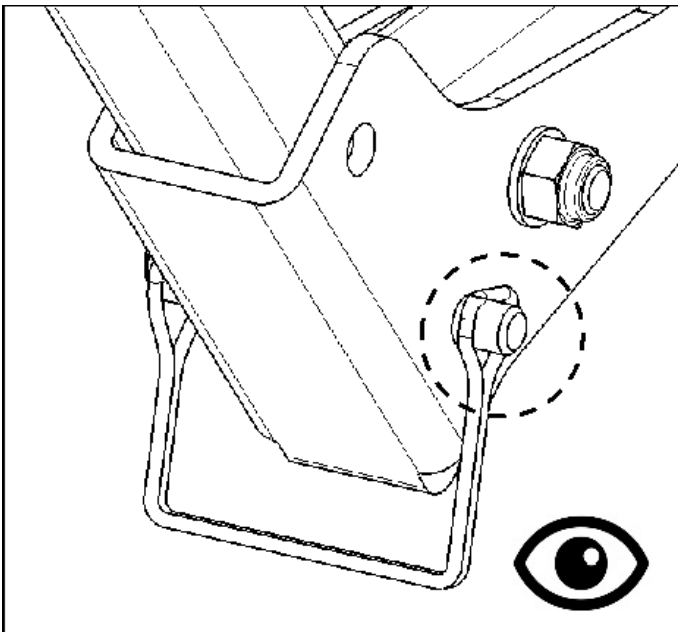

Payload and side marker lights | e.base XT

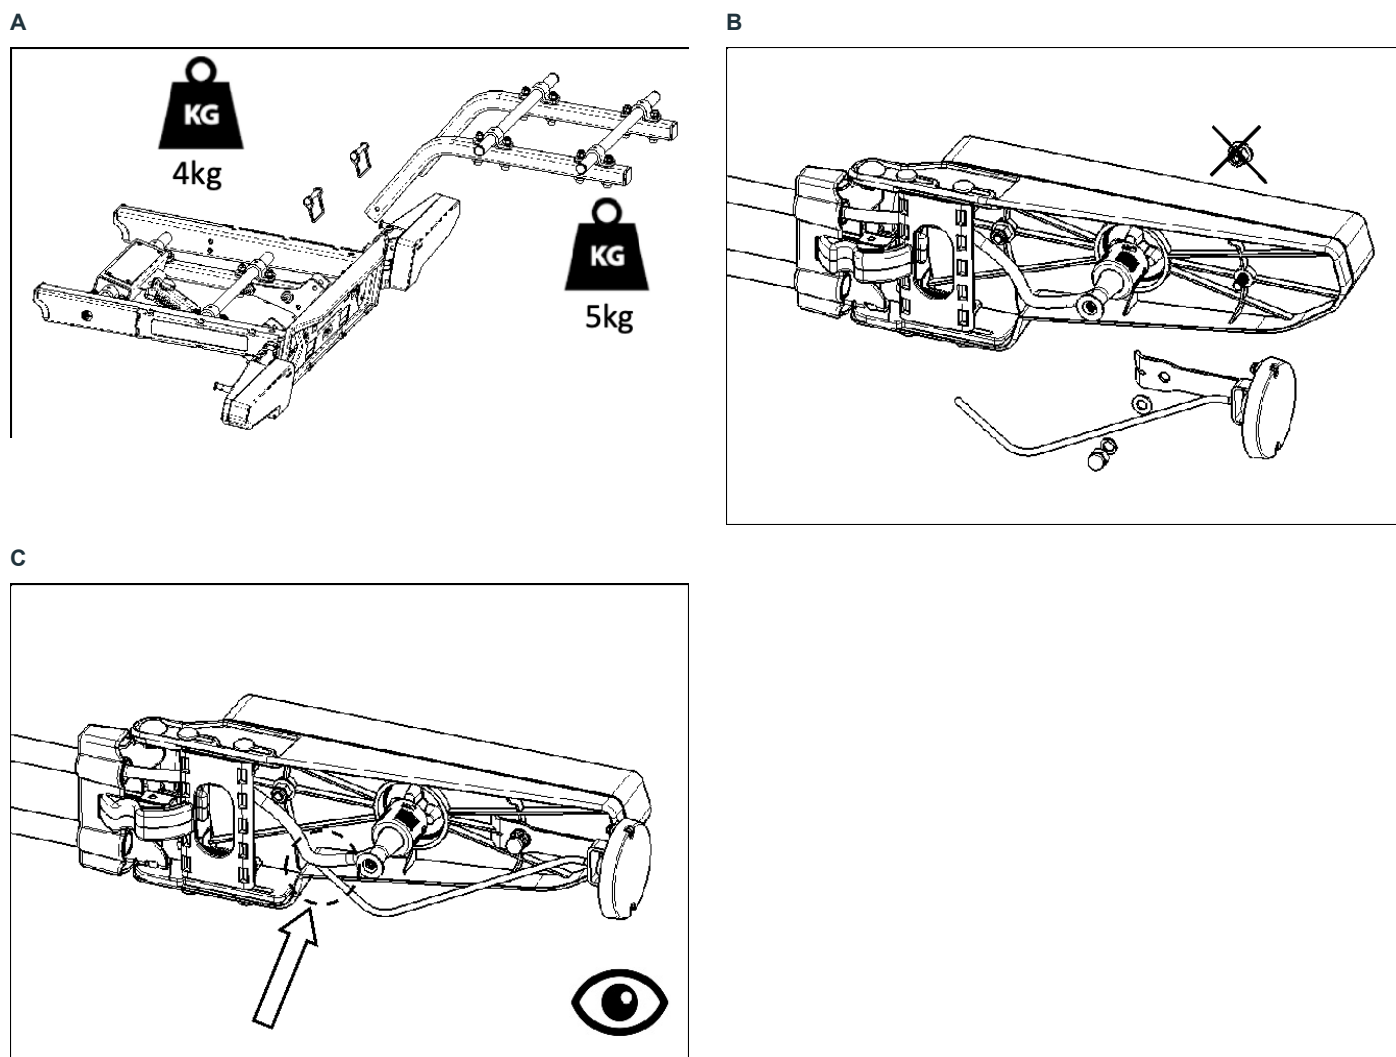

When e.base XT is not in use, release the linchpins and remove the detachable section. The two bolted-on supports remain on e.base.

For every payload calculation, allow for 4 kg added to e.base by the fixed parts, plus a further 5 kg for the removable section.

Side marker lights are required when using e.base XT. Remove the nut on e.base and screw on the side light. Open the cable sheath at the illustrated position. Connect the wires, for example with suitable quick connectors: driver's side: white to grey-black, brown to brown. Passenger's side: white to grey-red, brown to brown. Reseal the opened area. Check that both lamps illuminate continuously.

Remove loose parts before driving | e.base XT

WARNING: falling parts can cause accidents. Before driving, remove all loose parts and additional fittings, such as drinks bottles, loose straps, pannier bags, baskets, batteries and child seats.

Product warranty

Jopindo GmbH provides a two (2) year product warranty for this Minnid product under the following conditions. You must normally reside in Europe; the product must have been manufactured by Jopindo GmbH and sold as new; and you must have inspected it after purchase and reported any detected defects to the selling dealer. Claims arise where design, material or workmanship defects for which Jopindo GmbH is responsible significantly impair normal use. Impairment due to inadequate maintenance, incorrect or improper use, particular environmental influences or unusual operating conditions must be excluded. You must allow Jopindo GmbH to inspect the product on site.

Jopindo GmbH may, at its discretion, repair defective products, supply replacements or refund their current value. Current value means the original purchase price less 15 % for each year begun after purchase. Claims become time-barred within one year after notification to Jopindo GmbH. The two-year warranty period starts on purchase and is not extended by warranty measures.

This product warranty creates no further claims. In particular, damages claims are excluded unless Jopindo GmbH culpably harms life, body or health, or breaches other obligations intentionally or through gross negligence. Your contractual rights against the selling dealer, particularly rights relating to defects, remain unaffected.

Manufacturer and contact

Minnid
Jopindo GmbH
Massenheimer Weg 25
D-61352 Bad Homburg
www.minnid.com

Source edition: 1.240.233BA_20231120

Single-language edition | English