


User manual

e.base

Carrier system

1.240.160

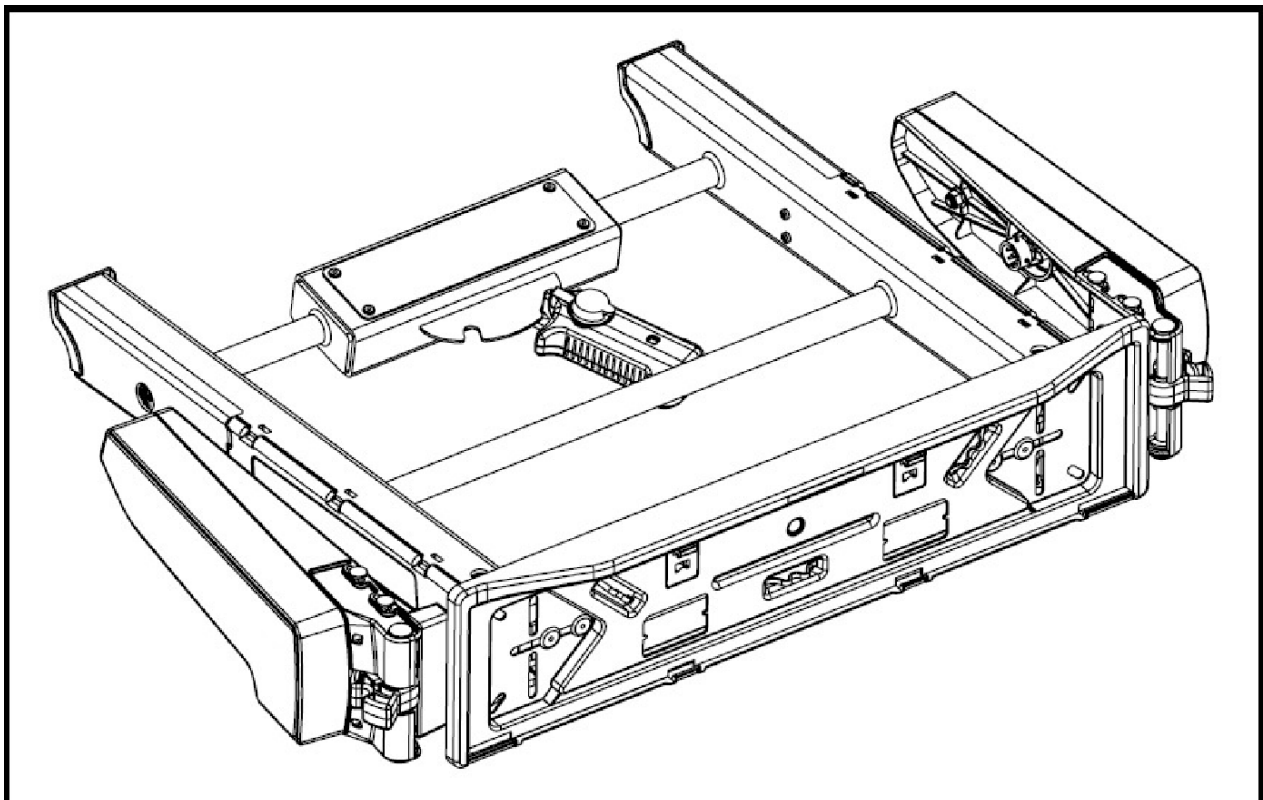

Minnid
Jopindo GmbH
Massenheimer Weg 25
D-61352 Bad Homburg
www.minnid.com

Single-language edition

Contents

Document and safety	3
Safe use	4
Before every journey	5
While driving	6
Product and accessories	7
Component overview	8
Installation e.base	9
Illustrations Installation	10
Locking and unfolding the lamps e.base	11
Illustrations Locking and unfolding the lamps	12
Registration plate and lamp position e.base	13
Illustrations Registration plate and lamp position	14
Removal e.base	15
Maintenance and care	16
Spare parts	17
Product warranty	18
Manufacturer and contact	19

Document and safety

These instructions form part of the product. Read them in full, follow all safety instructions and keep them accessible. Also follow the instructions for the vehicle, all carriers and accessories used, and the information on the type plate. Copyright protected; reproduction, reprinting and distribution require permission. Subject to change.

WARNING: a hazardous situation that may cause death or serious injury.

CAUTION: a situation that may cause minor or moderate injury.

NOTICE: a situation that may cause damage to property or the environment.

Symbols in the illustrations: red cross = incorrect; green tick = correct; eye = visual check. Numbers and arrows show the sequence and direction of movement. Letters identify components. Follow the actions in the order given in the text.

Safe use

Maximum carrying capacity: 150 kg

Failure to follow these instructions may cause injury or accidents. Use the product only when correctly installed and in perfect technical condition, on paved roads. Off-road use is prohibited. Do not use a damaged or independently modified product. Children and people unable to assess the hazards must not operate it. Any use other than that described is improper use.

For attachment to the e.hit carrier system and use with the listed accessories. Observe the approval for the specific product and vehicle.

The driver is responsible for the vehicle and its load. National rules for securing and marking loads (e.g. a warning panel) take precedence and must always be followed. Do not exceed the vehicle's permissible axle loads or gross weight; consult the vehicle manual and registration documents. Also observe the load limits of every component used.

The manufacturer accepts no liability or warranty for damage caused by failure to follow the instructions, improper use or handling, unauthorised spare parts or unqualified repairs.

Before every journey

Check that the system and all accessories are correctly secured. Lock every lock. The lights and registration plate must be clearly visible from behind, and the driver must have an unobstructed view in every direction. If the vehicle's third brake light is obscured, fit a replacement third brake light. Place heavy luggage as far forward as possible in the luggage compartment to reduce rear loading.

Unfold the lamps. Fit an official registration plate matching the vehicle's plate. Check the rear lights, brake lights, indicators, rear fog light and plate illumination. When the carrier's rear fog light is used, the vehicle's rear fog light must be deactivated.

If the load projects more than 380 mm sideways beyond the lamp carrier, adjust the lamp position where adjustable. If adjustment is insufficient, mark the load with a white light facing forwards and a red light facing rearwards, no more than 1500 mm above the road. Follow national regulations.

When carrying nothing, remove the detachable system and carry it, for example, in the luggage compartment. This reduces fuel consumption, makes parking easier and protects the product.

While driving

Observe the load regularly in the rear-view mirror. If it shifts, drive at reduced speed to the next suitable stopping place and check the attachments. Maximum speed: 130 km/h. Expect greater sensitivity to crosswinds and altered braking behaviour due to the load distribution. Do not drive off-road or enter a car wash with the system fitted. Check the system, accessories and load after approximately 10 km and every 500 km on longer journeys; check sooner on uneven roads.

Connecting the plug may automatically deactivate assistance systems such as parking sensors, parking assistance or the automatic tailgate. Consult the vehicle manual.

Product and accessories


Check the delivery is complete: product, keys and instructions.

Article / type	e.base 1.240.160
Maximum carrying capacity	150 kg Subject to the e.hit carrier system used. Including the weight of fitted accessories.
Marking on the illustrated type plate	E13 26R-03 8594

Product and accessories

e.hit 120	1.240.060
e.hit 150	1.240.400
e.carry	1.240.070
e.box	1.240.344
e.base XT	1.240.233


Component overview

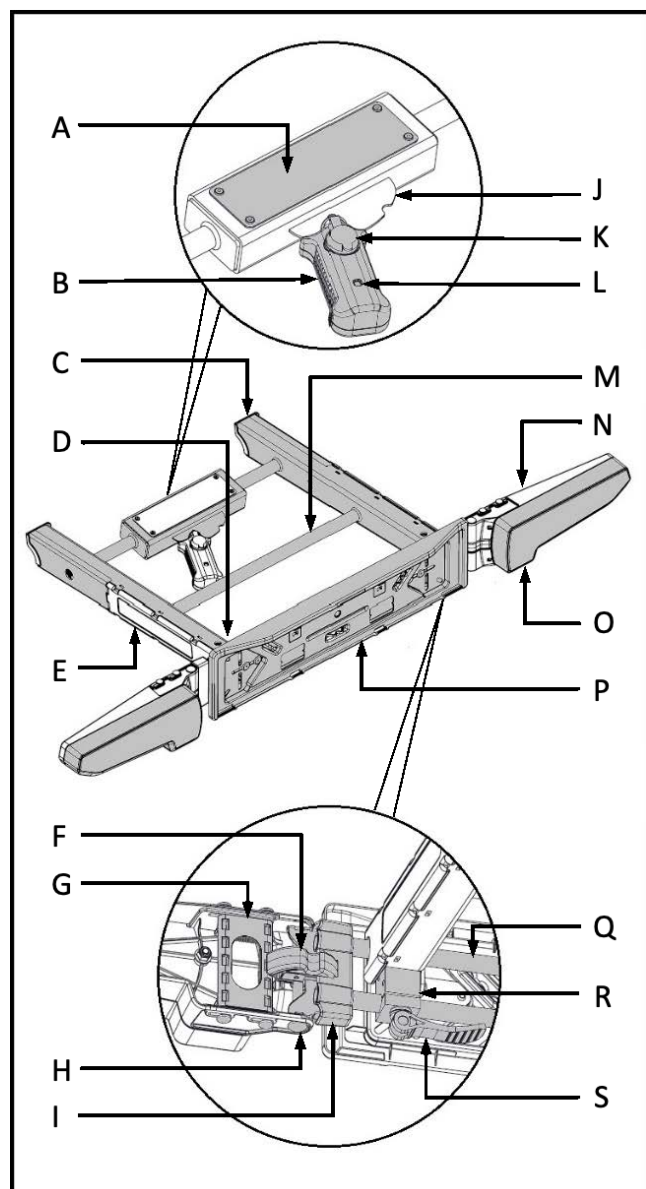


- A Clamping system cover
- B Clamping system handle
- C Base carrier support-arm guide
- D Type plate
- E Base carrier cover
- F Lamp fixing
- G Lamp slider
- H Lamp carrier pivot axis
- I Lamp holder with cover
- J Base carrier cam disc
- K Lock with protective cap
- L Red-green indicator
- M Base carrier
- N Lamp carrier
- O LED lamp
- P Registration plate holder
- Q Lamp adjustment
- R Lamp locking device
- S Quick release

Installation | e.base


A

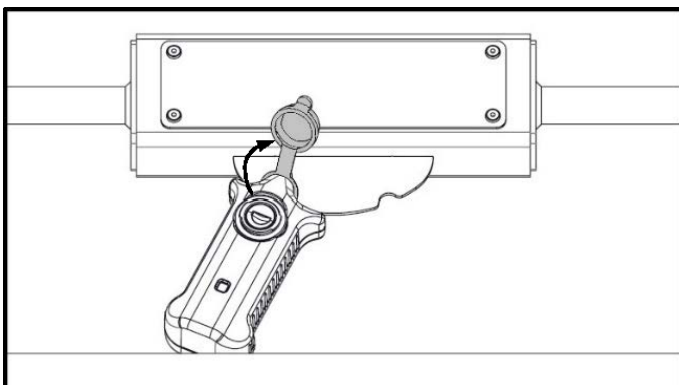

B

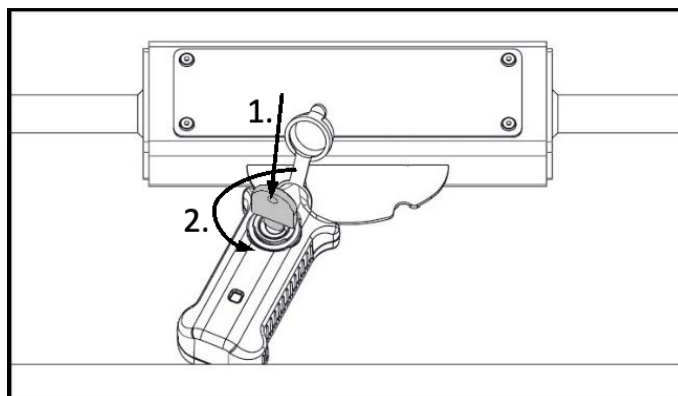


C

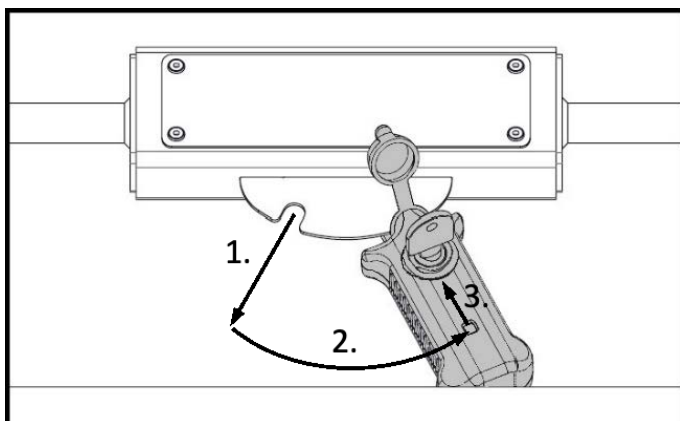


1. Remove the protective cap, insert the key and unlock the lock.
2. Pull the handle out of the large left recess. Swing it along the cam disc to the small right recess. Release it; the handle is drawn into the recess.
3. The indicator must show RED.
4. Slide the product onto the e.hit support arms as far as it will go.
5. Pull the handle out of the small right recess and swing it along the cam disc to the large left recess. Release it; the handle is drawn into the recess.

Illustrations | Installation


D

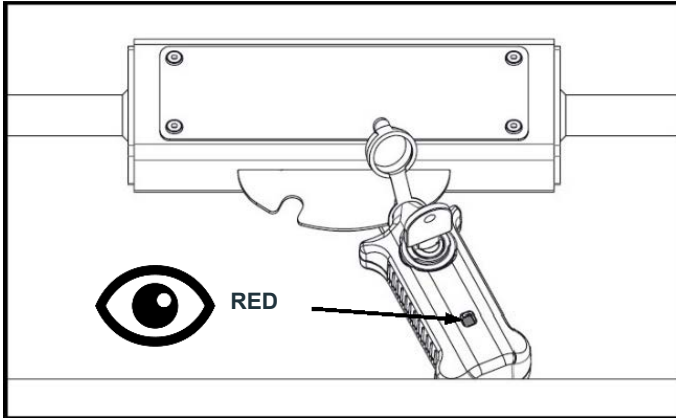

E

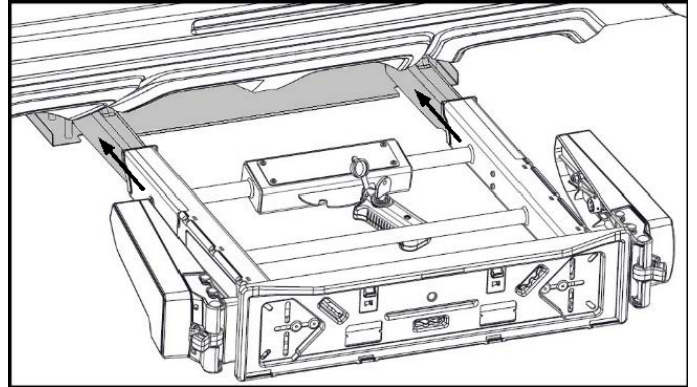


F

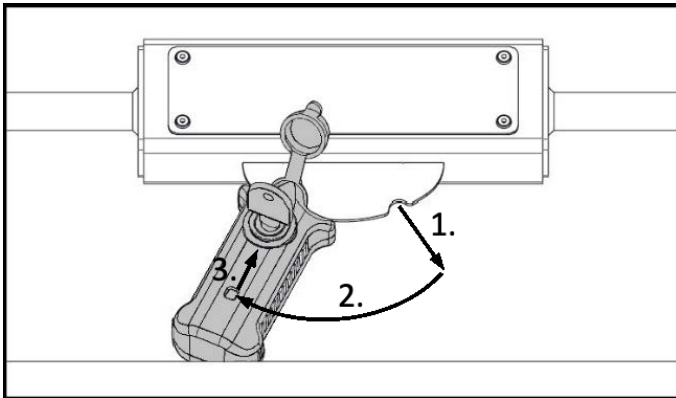


Locking and unfolding the lamps | e.base


A

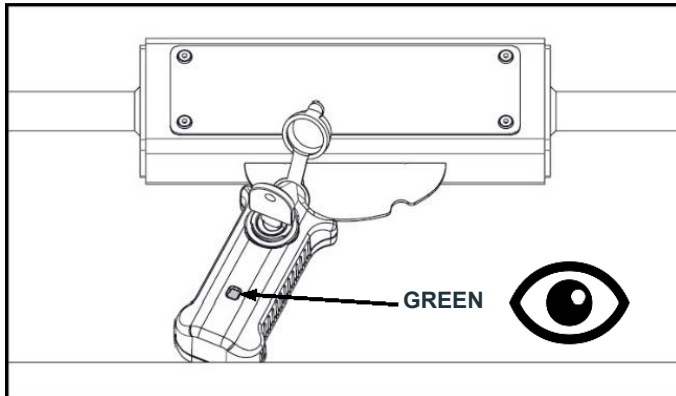

B

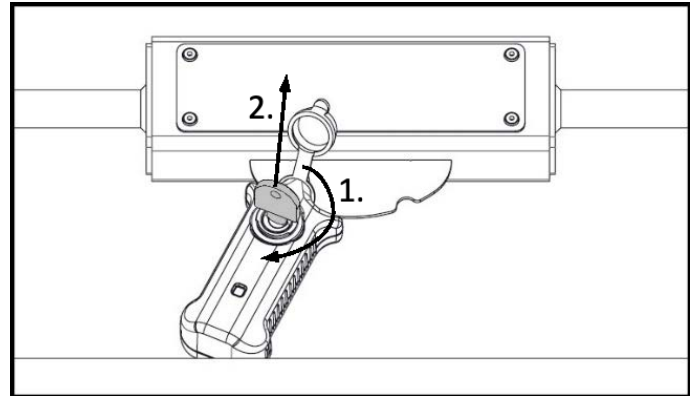


C

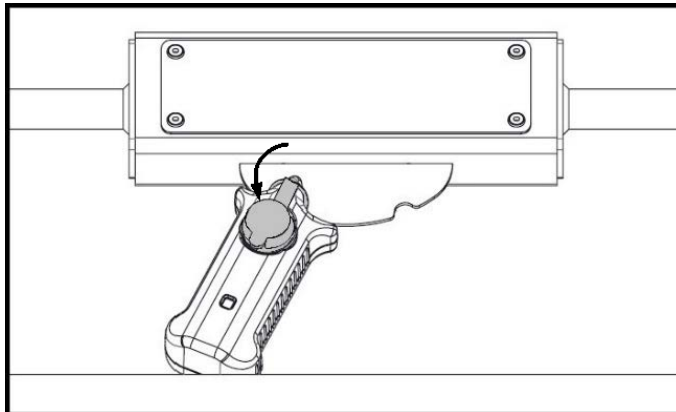


1. The handle indicator must show GREEN. Lock the lock, remove the key and press on the protective cap.
2. Unfold both lamps until they engage. Check that they are securely engaged.
3. Switch on the vehicle lights and check the carrier lights. If none of them work, check that the carrier system is correctly installed.

Illustrations | Locking and unfolding the lamps


D

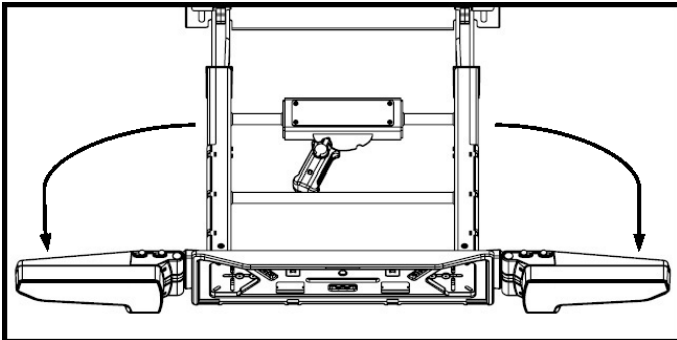

E

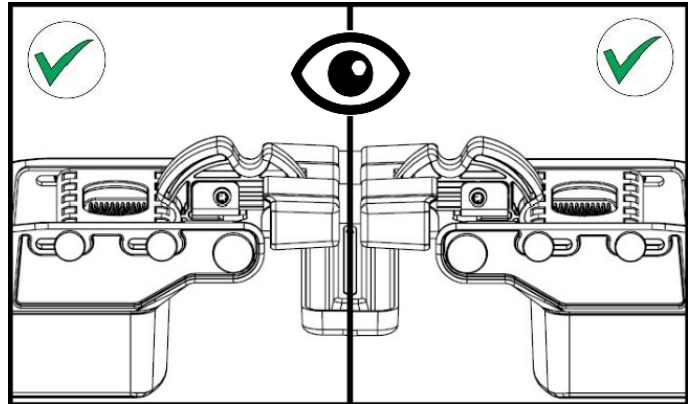


F

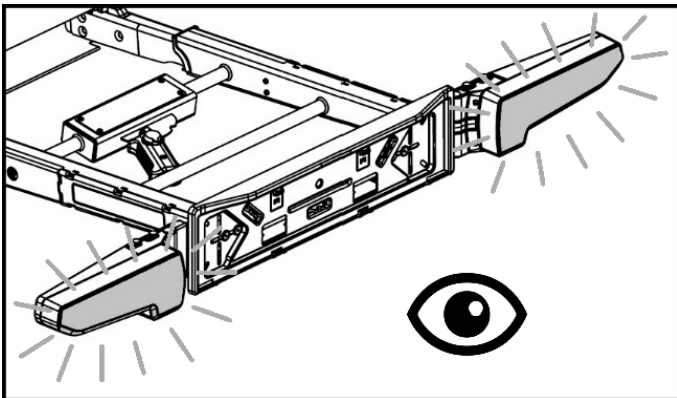


Registration plate and lamp position | e.base


A

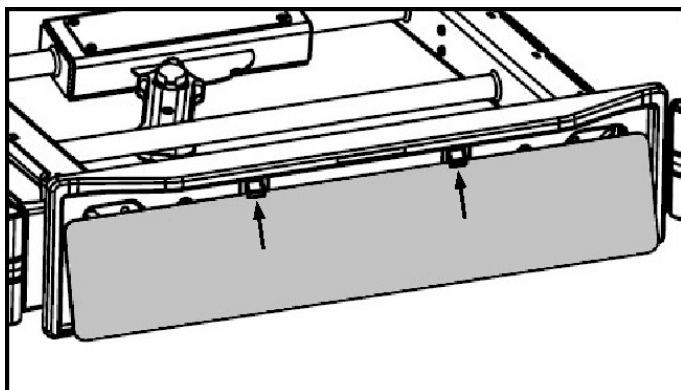

B

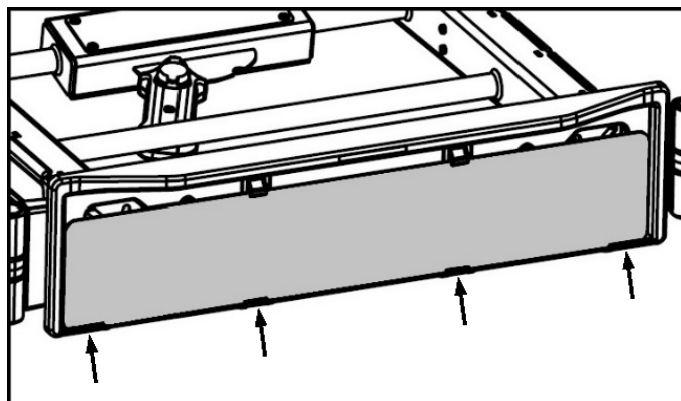

C

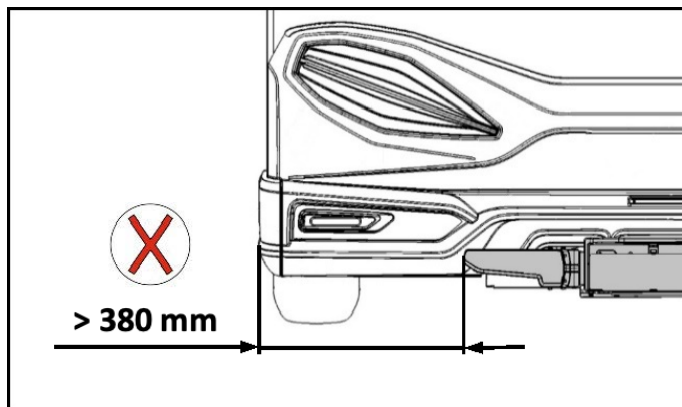


Slide the registration plate into its holder from below. Push it upwards until it snaps into place at the bottom. Check that it is secure.


Check the distance between the vehicle's outer edge and the lamp carrier. If it exceeds 380 mm, open the quick releases and pull the lamps outwards. The distance must then be less than 380 mm. Close the quick releases.

Illustrations | Registration plate and lamp position

D

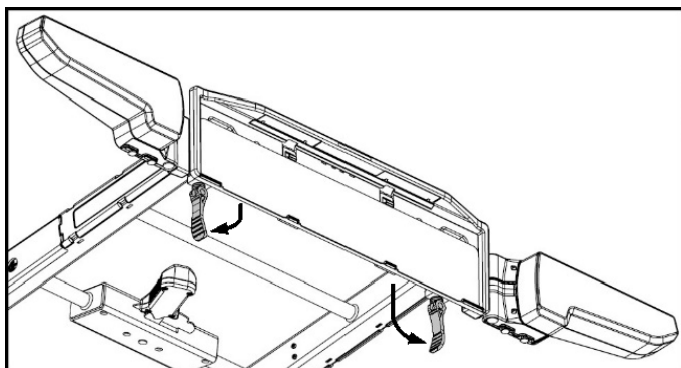


E

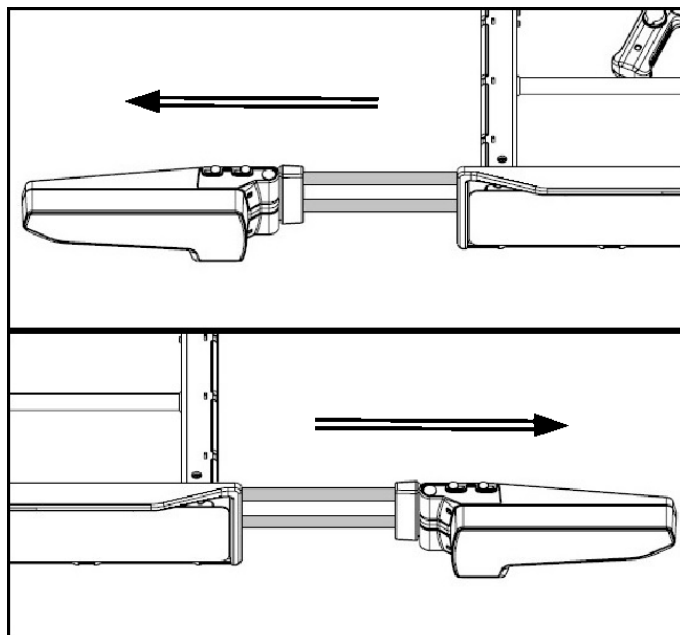


Removal | e.base

A

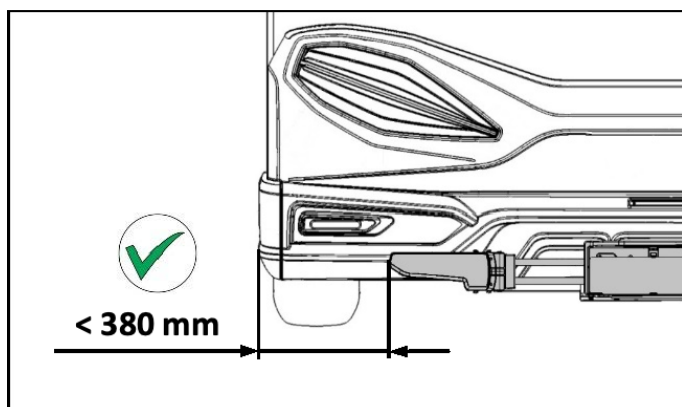

B

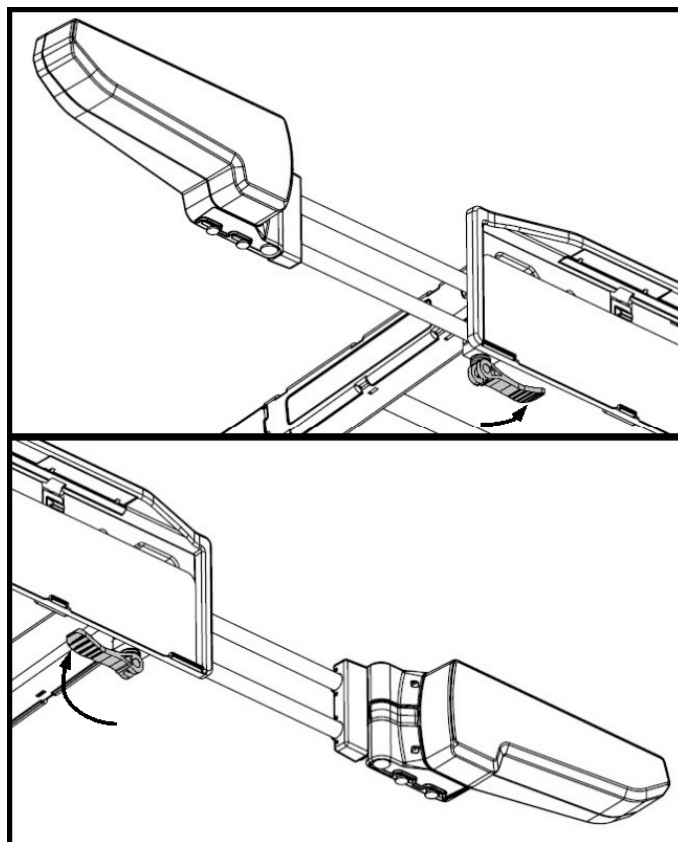


Open the quick releases, push the lamps inwards and close the quick releases. Fold both lamps in until they engage and check that they are secure.

1. Remove the cap, insert the key and unlock the lock.
2. Pull the handle out of the large left recess and swing it along the cam disc to the small right recess. The indicator must show RED.
3. Pull the product off the e.hit support arms.
4. Pull the handle out of the small right recess and swing it to the large left recess. The indicator must show GREEN.
5. Lock the lock, remove the key and replace the cap to protect it from moisture and dirt.

Maintenance and care








A

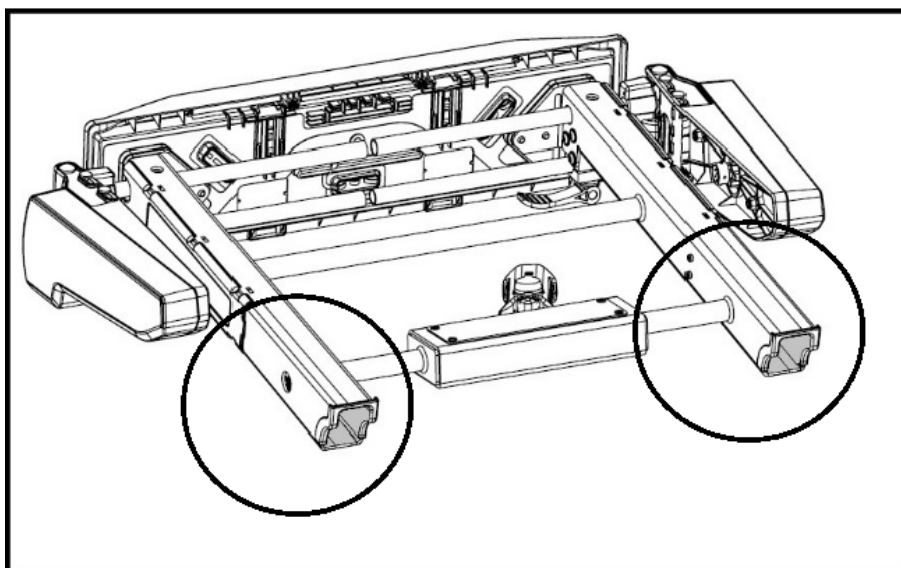

Keep the guides in the support arms free of dirt deposits.

NOTICE: pressure washers, abrasive cleaners and aggressive detergents can cause damage. Clean the product regularly with water and car shampoo. Remove salt and dirt after winter use. Spray the lock with resin-free oil every 100 locking cycles, and at least every 2 months, then operate it several times.

 Spare parts

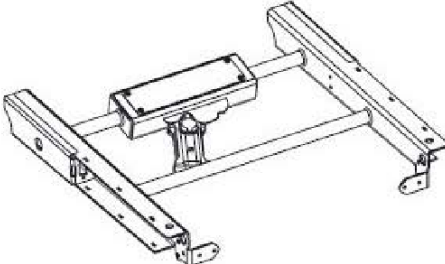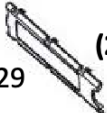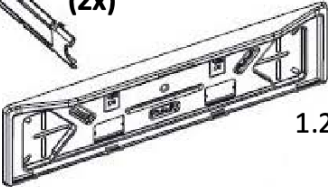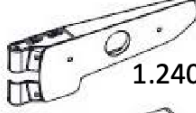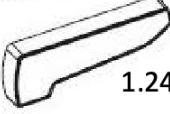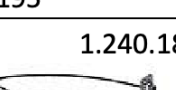1.240.198	1.240.139.XXX	1.240.199
		
	1.240.224	(4x) • 1.240.200
		
1.240.229	(2x)	(4x) • 1.240.241
		
1.240.170		
1.240.234	(4x)	(2x) • 1.240.239
		
1.240.242	(8x)	(2x) • 1.240.237
		
1.240.236	(2x)	(6x) • 1.240.240
		
	(2x)	(2x) • 1.240.238
		
1.240.190	(2x)	(2x) • 1.238.237
		
1.240.194	(4x)	(2x) • 1.240.206
		
1.240.191	(4x)	(2x) • 1.240.186
		
1.240.192	(8x)	(2x) • 1.240.193
		
	(4x) •	1.240.110
		
1.238.109	(4x)	
		
1.240.189		1.240.228
		
1.240.195		1.240.196
		
1.240.181	(2x) •	1.240.203
		
	(2x) •	1.240.187
		
1.240.197	(2x) •	1.240.204
		

Product warranty

Jopindo GmbH provides a two (2) year product warranty for this Minnid product under the following conditions. You must normally reside in Europe; the product must have been manufactured by Jopindo GmbH and sold as new; and you must have inspected it after purchase and reported any detected defects to the selling dealer. Claims arise where design, material or workmanship defects for which Jopindo GmbH is responsible significantly impair normal use. Impairment due to inadequate maintenance, incorrect or improper use, particular environmental influences or unusual operating conditions must be excluded. You must allow Jopindo GmbH to inspect the product on site.

Jopindo GmbH may, at its discretion, repair defective products, supply replacements or refund their current value. Current value means the original purchase price less 15 % for each year begun after purchase. Claims become time-barred within one year after notification to Jopindo GmbH. The two-year warranty period starts on purchase and is not extended by warranty measures.

This product warranty creates no further claims. In particular, damages claims are excluded unless Jopindo GmbH culpably harms life, body or health, or breaches other obligations intentionally or through gross negligence. Your contractual rights against the selling dealer, particularly rights relating to defects, remain unaffected.

Manufacturer and contact

Minnid
Jopindo GmbH
Massenheimer Weg 25
D-61352 Bad Homburg
www.minnid.com

Source edition: 1.240.160BA_20231120

Single-language edition | English