


User manual

e.carry MB

Motorcycle carrier

1.240.600

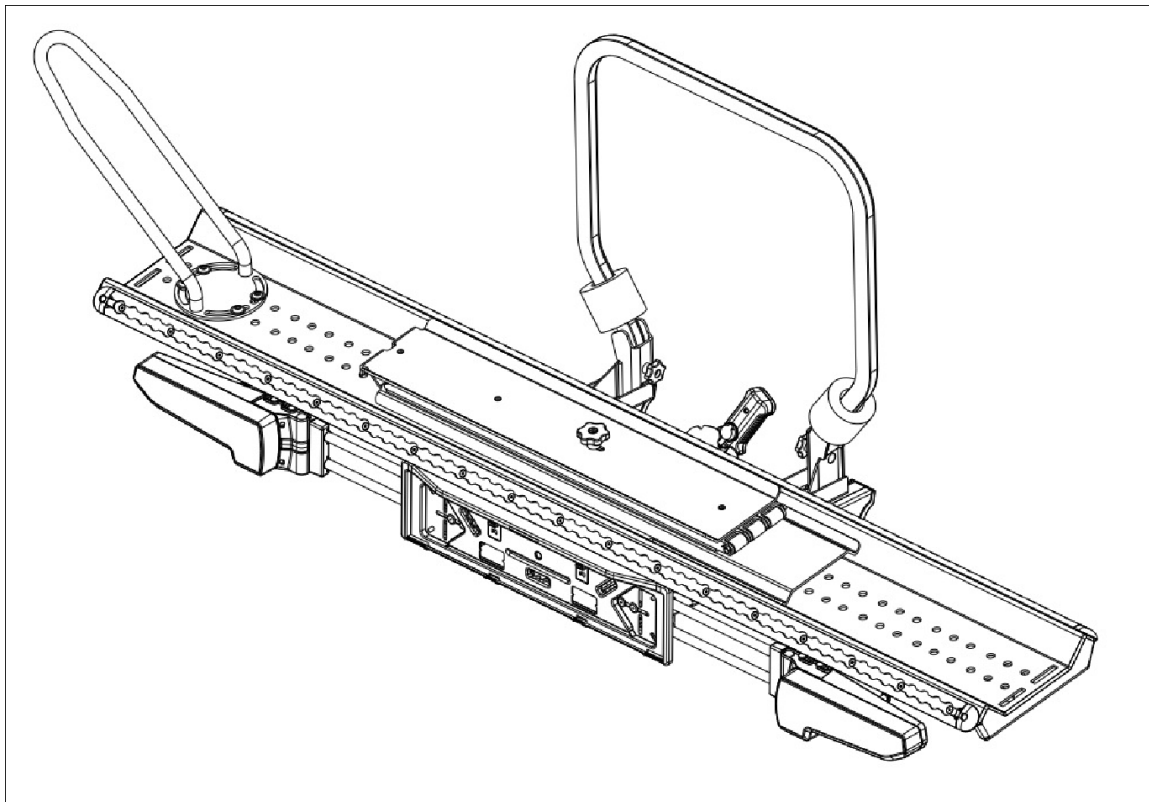

Minnid
Jopindo GmbH
Massenheimer Weg 25
D-61352 Bad Homburg
www.minnid.com

Single-language edition

Contents

Document and safety	3
Safe use	4
Before every journey	5
While driving	6
Product and accessories	7
Component overview	8
Assembly before first use e.carry MB	9
Installation e.carry MB	10
Illustrations Installation	11
Locking and unfolding the lamps e.carry MB	12
Illustrations Locking and unfolding the lamps	13
Registration plate and lamp position e.carry MB	14
Illustrations Registration plate and lamp position	15
Fitting the loading ramp e.carry MB	16
Wheel fixing and securing the motorcycle e.carry MB	17
Removal e.carry MB	18
Maintenance and care	19
Spare parts	20
Product warranty	21
Manufacturer and contact	22

Document and safety

These instructions form part of the product. Read them in full, follow all safety instructions and keep them accessible. Also follow the instructions for the vehicle, all carriers and accessories used, and the information on the type plate. Copyright protected; reproduction, reprinting and distribution require permission. Subject to change.

WARNING: a hazardous situation that may cause death or serious injury.

CAUTION: a situation that may cause minor or moderate injury.

NOTICE: a situation that may cause damage to property or the environment.

Symbols in the illustrations: red cross = incorrect; green tick = correct; eye = visual check. Numbers and arrows show the sequence and direction of movement. Letters identify components. Follow the actions in the order given in the text.

Safe use

Maximum carrying capacity: 130 kg

Failure to follow these instructions may cause injury or accidents. Use the product only when correctly installed and in perfect technical condition, on paved roads. Off-road use is prohibited. Do not use a damaged or independently modified product. Children and people unable to assess the hazards must not operate it. Any use other than that described is improper use.

For attachment to the e.hit carrier system and use with the listed accessories. Observe the approval for the specific product and vehicle.

Permitted carrying capacity on the illustrated type plate: e.hit 120: 90 kg; e.hit 150: 130 kg. Carry MB own weight: 25 kg; loading ramp an additional 5 kg. Always account for accessory weights and the limits of the whole system when calculating the permitted load.

The driver is responsible for the vehicle and its load. National rules for securing and marking loads (e.g. a warning panel) take precedence and must always be followed. Do not exceed the vehicle's permissible axle loads or gross weight; consult the vehicle manual and registration documents. Also observe the load limits of every component used.

The manufacturer accepts no liability or warranty for damage caused by failure to follow the instructions, improper use or handling, unauthorised spare parts or unqualified repairs.

Before every journey

Check that the system and all accessories are correctly secured. Lock every lock. The lights and registration plate must be clearly visible from behind, and the driver must have an unobstructed view in every direction. If the vehicle's third brake light is obscured, fit a replacement third brake light. Place heavy luggage as far forward as possible in the luggage compartment to reduce rear loading.

Unfold the lamps. Fit an official registration plate matching the vehicle's plate. Check the rear lights, brake lights, indicators, rear fog light and plate illumination. When the carrier's rear fog light is used, the vehicle's rear fog light must be deactivated.

If the load projects more than 380 mm sideways beyond the lamp carrier, adjust the lamp position where adjustable. If adjustment is insufficient, mark the load with a white light facing forwards and a red light facing rearwards, no more than 1500 mm above the road. Follow national regulations.

When carrying nothing, remove the detachable system and carry it, for example, in the luggage compartment. This reduces fuel consumption, makes parking easier and protects the product.

While driving

Observe the load regularly in the rear-view mirror. If it shifts, drive at reduced speed to the next suitable stopping place and check the attachments. Maximum speed: 130 km/h. Expect greater sensitivity to crosswinds and altered braking behaviour due to the load distribution. Do not drive off-road or enter a car wash with the system fitted. Check the system, accessories and load after approximately 10 km and every 500 km on longer journeys; check sooner on uneven roads.

Connecting the plug may automatically deactivate assistance systems such as parking sensors, parking assistance or the automatic tailgate. Consult the vehicle manual.

Product and accessories

Check the delivery is complete: product, keys and instructions.

Article / type	e.carry MB 1.240.600
Maximum carrying capacity	130 kg Subject to the e.hit carrier system used. Including the weight of fitted accessories.
Own weight	25 kg


Permitted carrying capacity on the illustrated type plate: e.hit 120: 90 kg; e.hit 150: 130 kg. Carry MB own weight: 25 kg; loading ramp an additional 5 kg. Always account for accessory weights and the limits of the whole system when calculating the permitted load.

The type plate illustration contains the placeholder E13 26R-03 XXXX. This is not a complete approval number. Refer to the actual type plate.

Product and accessories

swivel-carrier	1.240.961 (left) / 1.260.090 (right)
e.hit 120	1.240.060
e.hit 150	1.240.400
Wheel cradle with rocker	1.240.755
Side marker light kit	1.240.450


Component overview

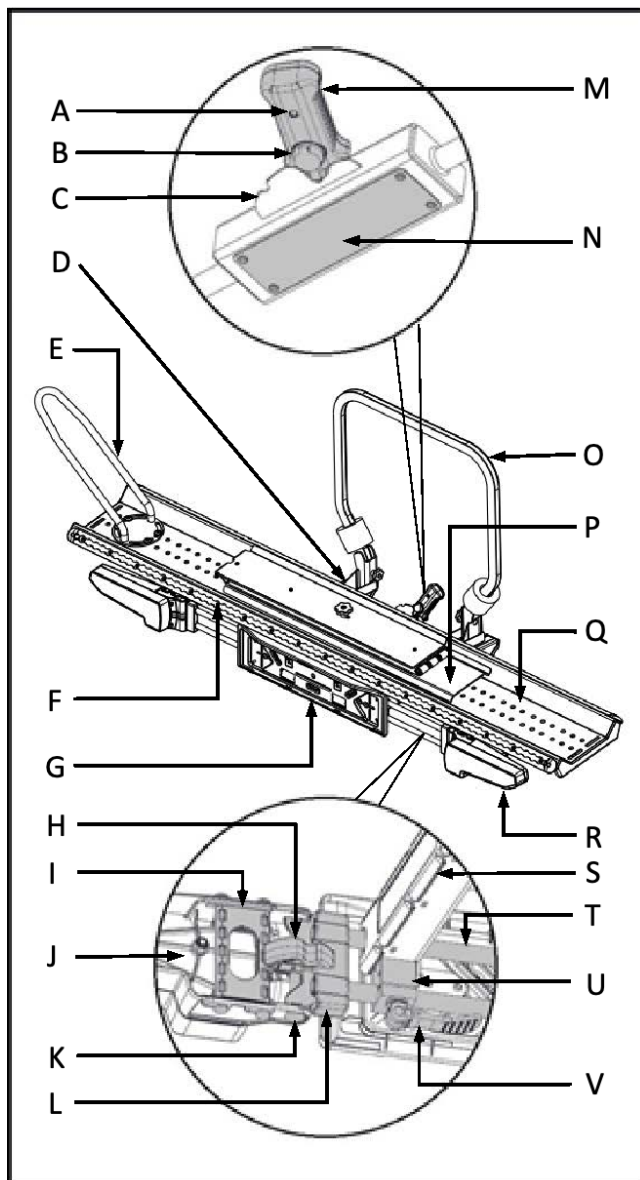


- | | |
|----------|---------------------------|
| A | Red-green indicator |
| B | Lock with protective cap |
| C | Base carrier cam disc |
| D | Type plate |
| E | Wheel fixing |
| F | Tie-down rail |
| G | Registration plate holder |
| H | Lamp fixing |
| I | Lamp slider |
| J | Lamp carrier |
| K | Lamp carrier pivot axis |
| L | Lamp holder with cover |
| M | Clamping system handle |
| N | Clamping system cover |
| O | Securing bracket |
| P | Loading ramp |
| Q | Base carrier |
| R | LED lamp |
| S | Base carrier cover |
| T | Lamp adjustment |
| U | Lamp locking device |
| V | Quick release |

Assembly before first use | e.carry MB


A

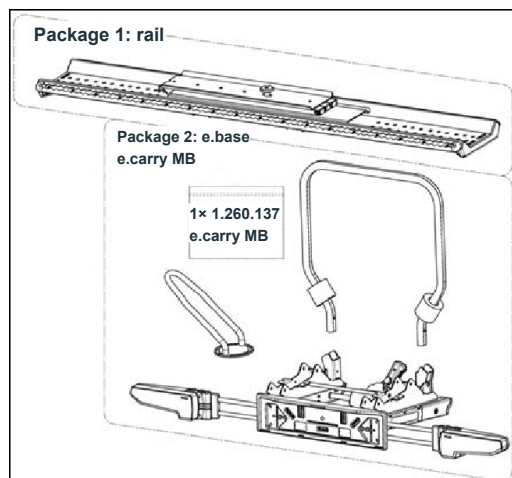


B

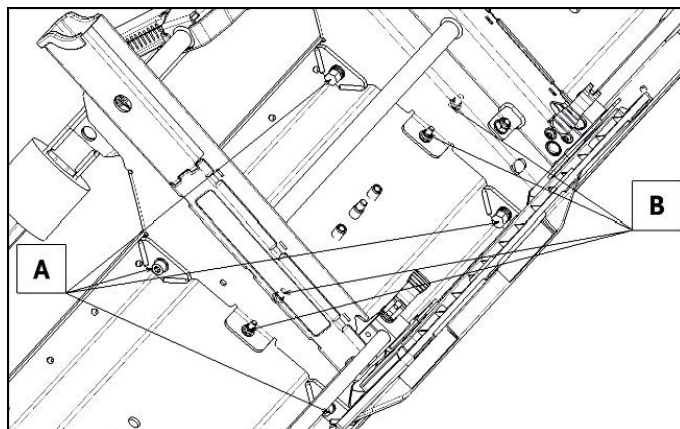

C

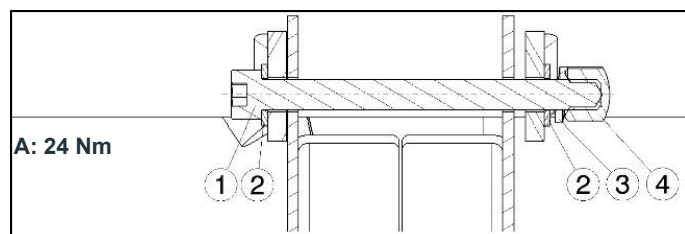

D

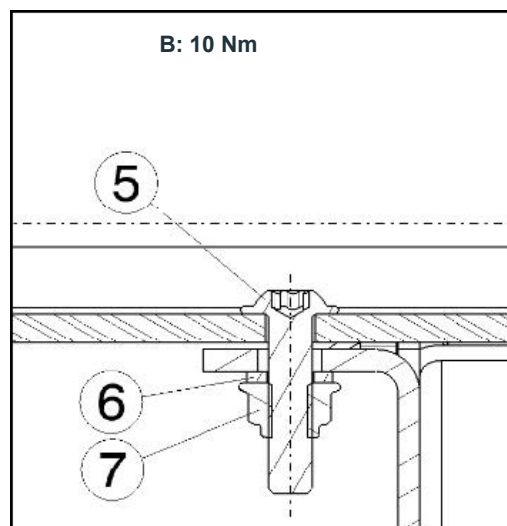

e.carry MB is supplied in two packages. Bolt the sections together as illustrated before use.

Connection A (4×): (1) socket-head cap screw ISO 4762 M8×90; (2) POM flat washer; (3) spring washer M8; (4) cap nut DIN 917 M8.


Connection B (4×): (5) button-head screw ISO 7380-2 M6×25; (6) washer DIN 125 A6.4 A2; (7) hexagon nut EN 1663 M6.

Supplied bolt kit: 1.260.137 for e.carry MB.


Tightening torques: A = 24 Nm; B = 10 Nm.

Installation | e.carry MB


A

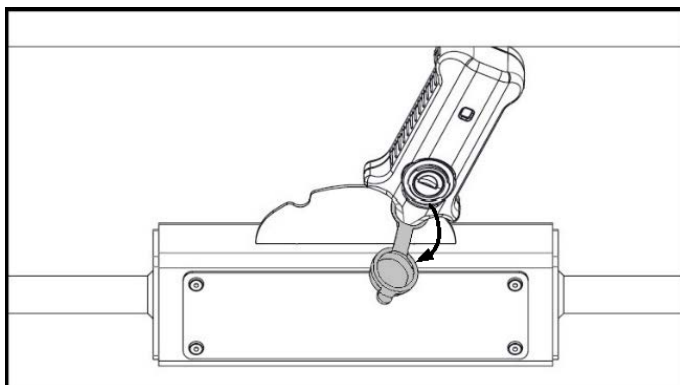

B

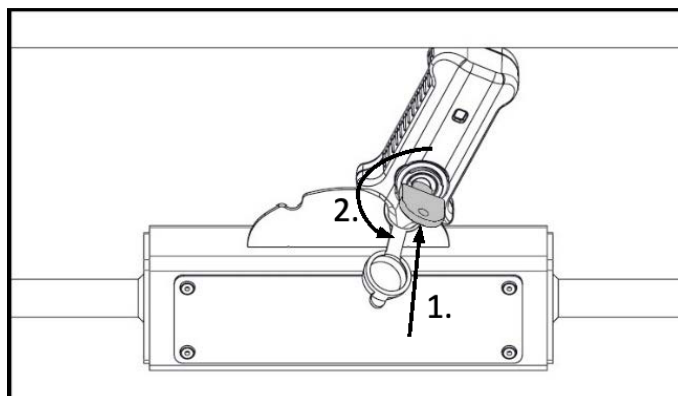


C

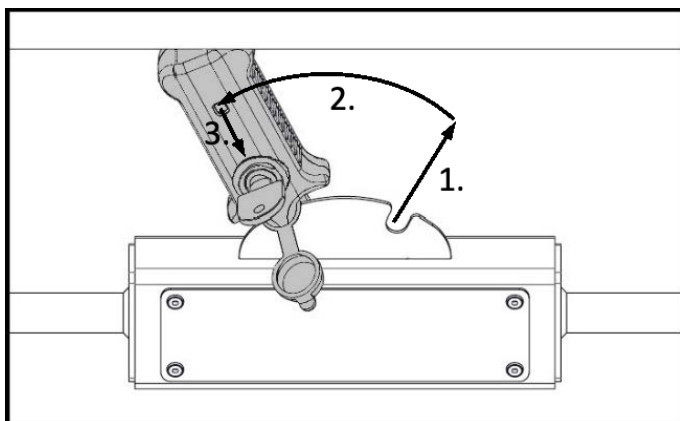


1. Remove the protective cap, insert the key and unlock the lock.
2. Pull the handle out of the large right recess. Swing it along the cam disc to the small left recess. Release it; the handle is drawn into the recess.
3. The indicator must show RED.
4. Slide the product onto the e.hit support arms as far as it will go.
5. Pull the handle out of the small left recess and swing it along the cam disc to the large right recess. Release it; the handle is drawn into the recess.

Illustrations | Installation


D

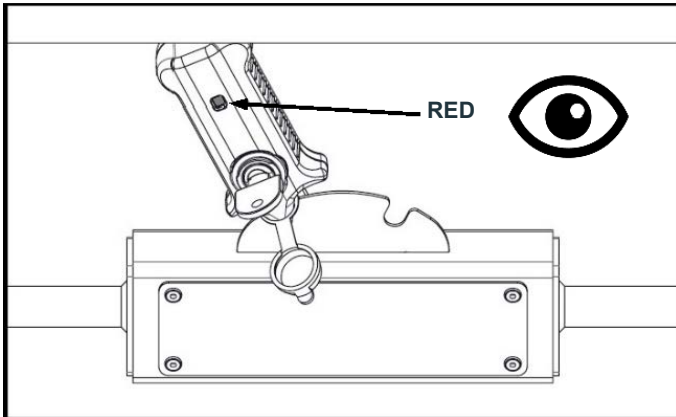

E

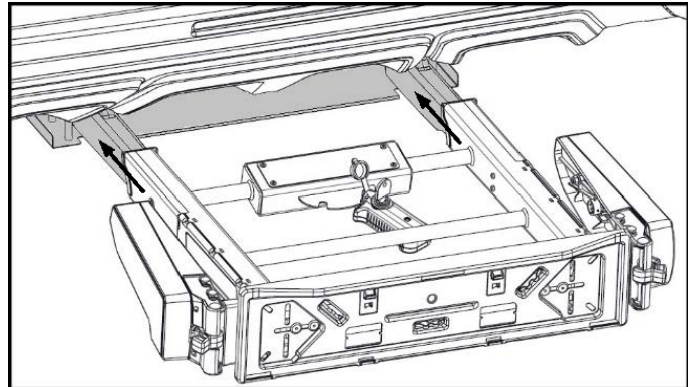


F

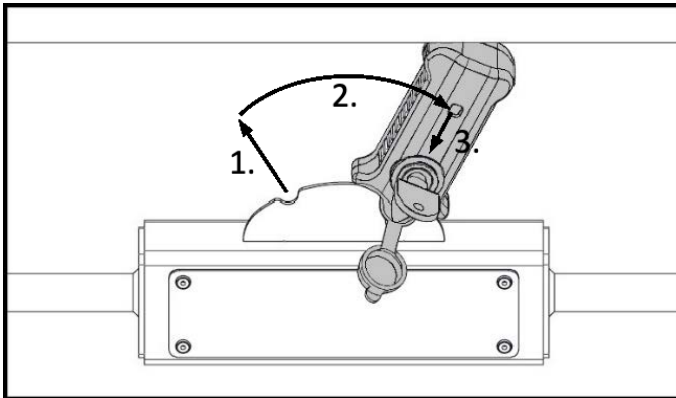


Locking and unfolding the lamps | e.carry MB


A

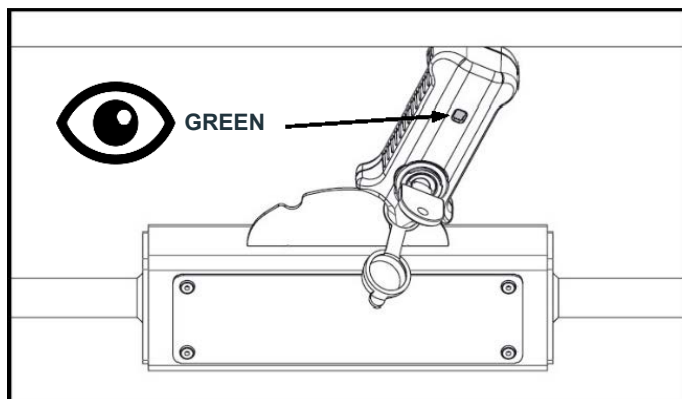

B

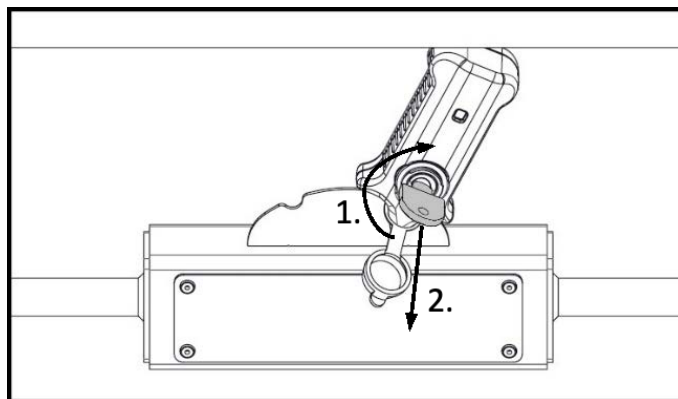


C

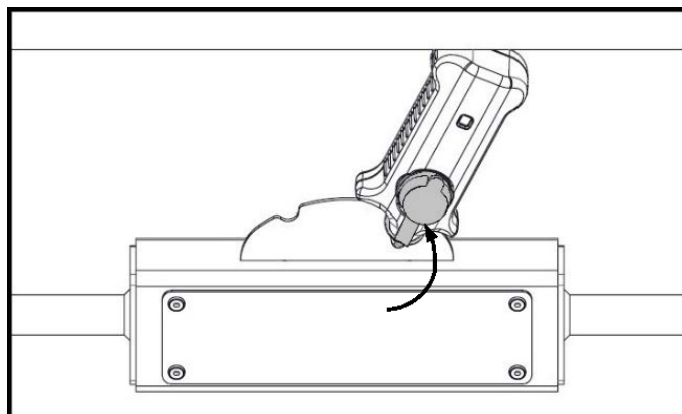


1. The handle indicator must show GREEN. Lock the lock, remove the key and press on the protective cap.
2. Unfold both lamps until they engage. Check that they are securely engaged.
3. Switch on the vehicle lights and check the carrier lights. If none of them work, check that the carrier system is correctly installed.

Illustrations | Locking and unfolding the lamps


D

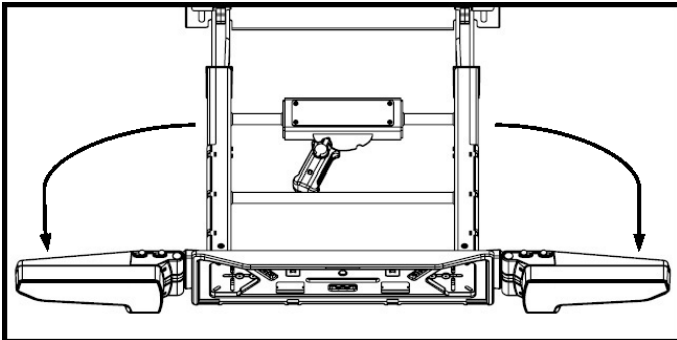


E

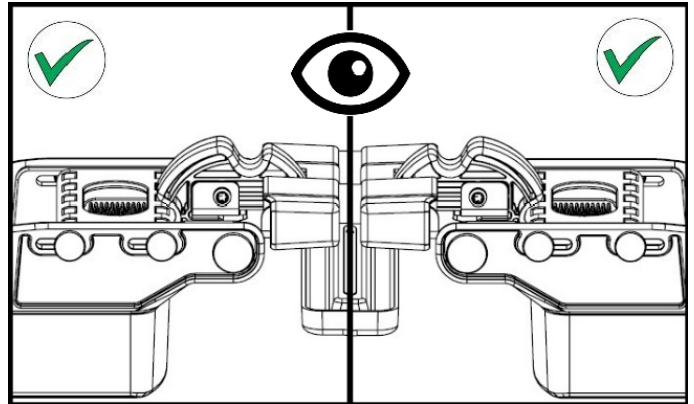

F

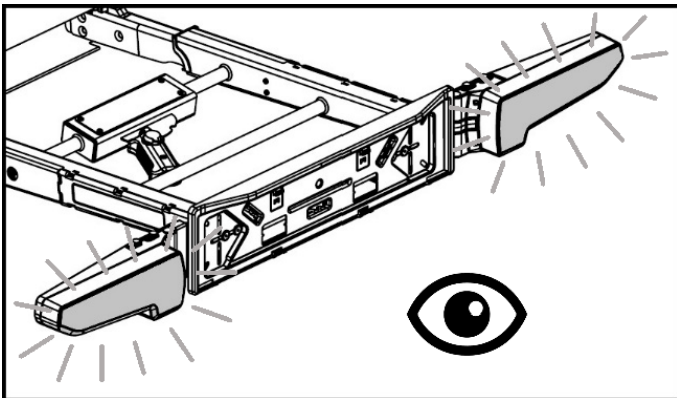

Registration plate and lamp position | e.carry MB

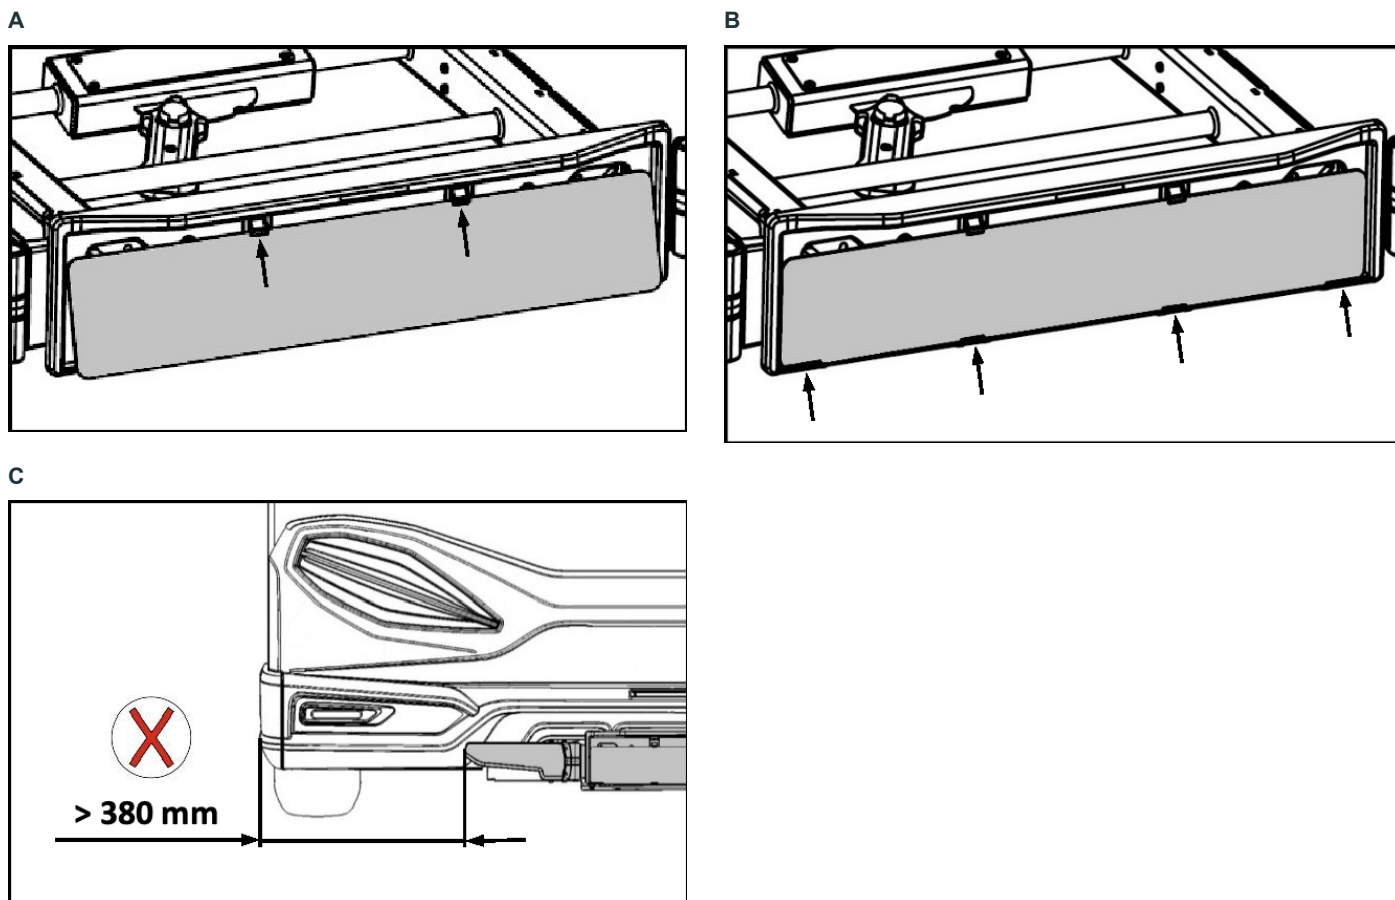


Slide the registration plate into its holder from below. Push it upwards until it snaps into place at the bottom. Check that it is secure.


Check the distance between the vehicle's outer edge and the lamp carrier. If it exceeds 380 mm, open the quick releases and pull the lamps outwards. The distance must then be less than 380 mm. Close the quick releases.

Illustrations | Registration plate and lamp position





D

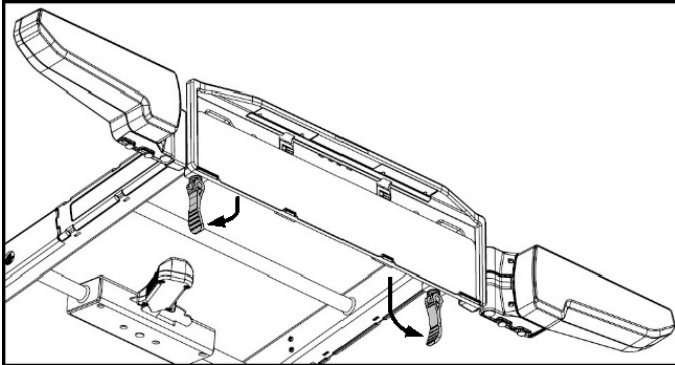

E

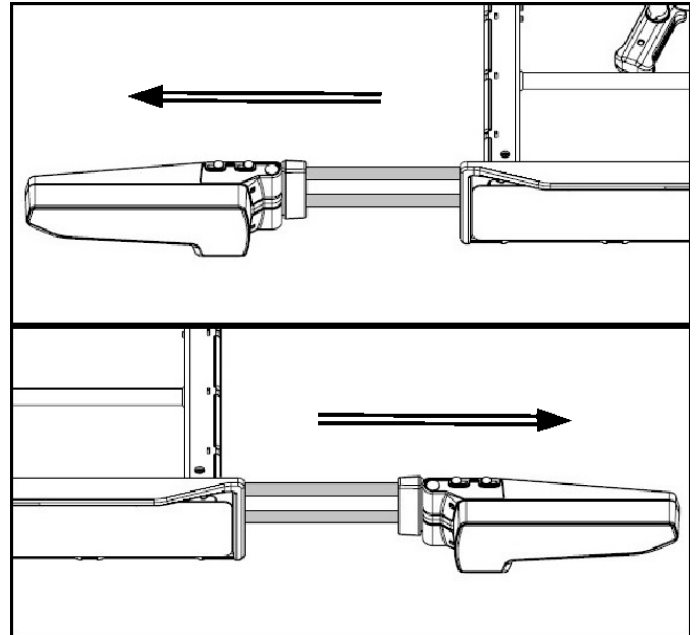


Fitting the loading ramp | e.carry MB

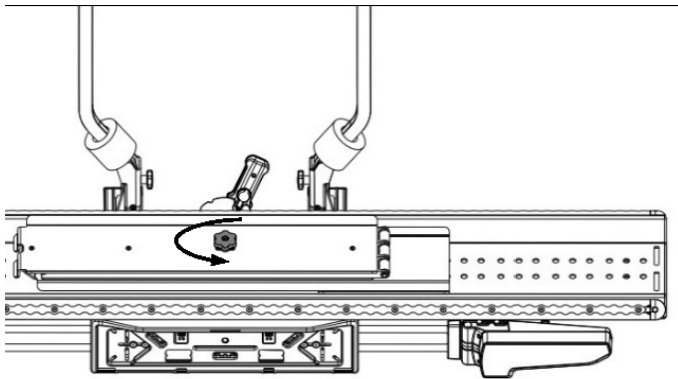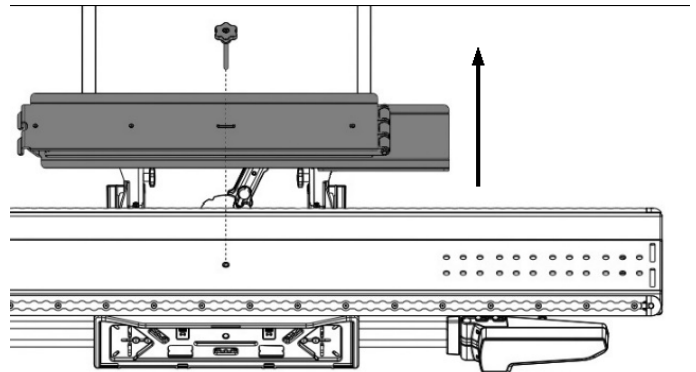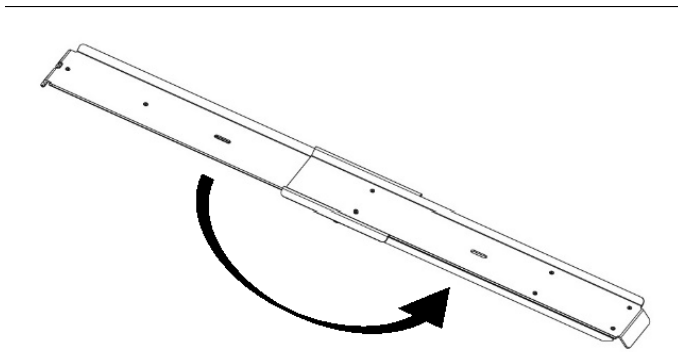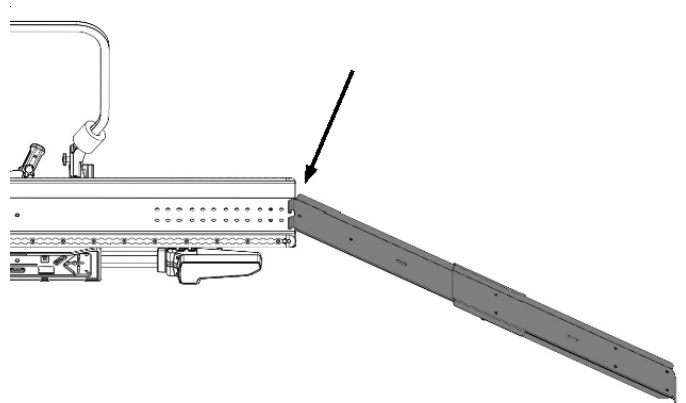A**B****C****D**


Unscrew the locking screw and remove the loading ramp. Unfold it and hook it into the base carrier.

Wheel fixing and securing the motorcycle | e.carry MB


A

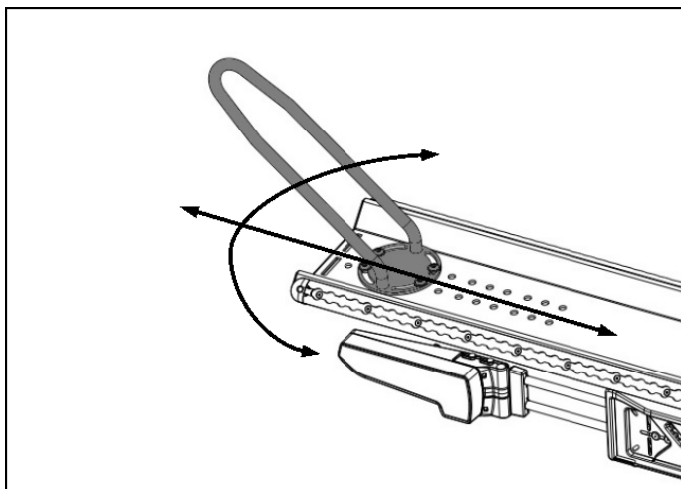

B

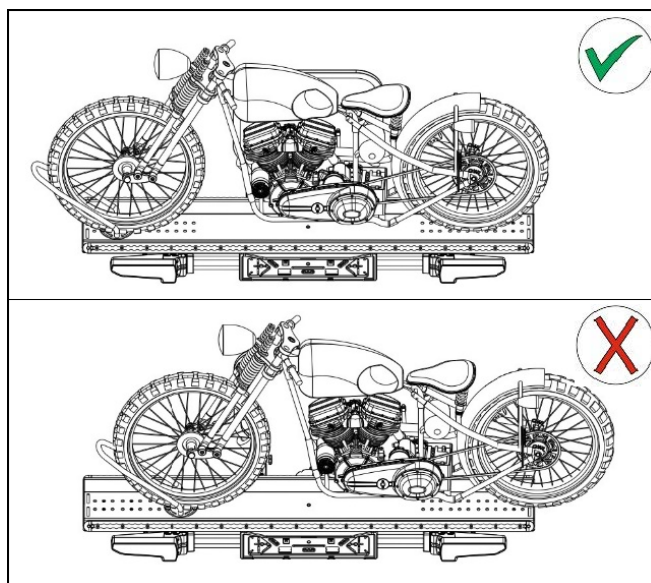

C

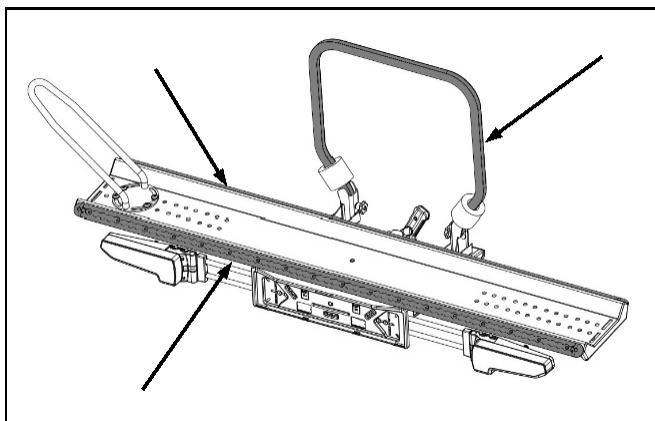

The motorcycle must be suitable for the carrier. Remove all loose parts and additional fittings before driving. Attach the wheel fixing at the required position on the base carrier using the four M10 bolted connections. Tightening torque: 49 Nm. Position it so that the motorcycle can stand completely on the base carrier. Secure the motorcycle in the wheel fixing and on the base carrier using the two tie-down rails and securing bracket.


Removal | e.carry MB

Hook the loading ramp into the base carrier. Remove all motorcycle attachments and push the motorcycle down the ramp off the carrier. Fold the ramp and secure it back on the base carrier.

1. Remove the cap, insert the key and unlock the lock.
2. Pull the handle out of the large right recess and swing it along the cam disc to the small left recess. The indicator must show RED.
3. Pull the product off the e.hit support arms.
4. Pull the handle out of the small left recess and swing it to the large right recess. The indicator must show GREEN.
5. Lock the lock, remove the key and replace the cap to protect it from moisture and dirt.

Maintenance and care






A

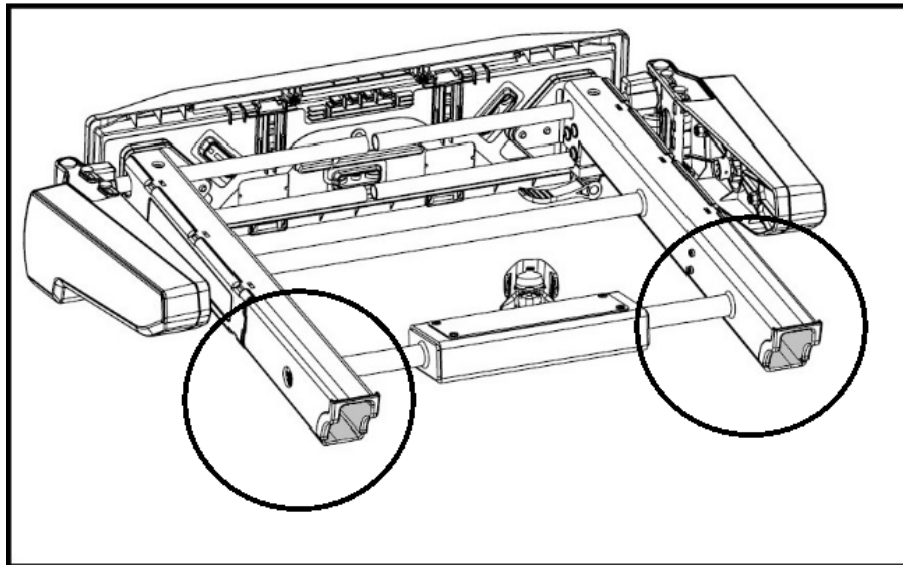

Keep the guides in the support arms free of dirt deposits.

NOTICE: pressure washers, abrasive cleaners and aggressive detergents can cause damage. Clean the product regularly with water and car shampoo. Remove salt and dirt after winter use. Spray the lock with resin-free oil every 100 locking cycles, and at least every 2 months, then operate it several times.

   Spare parts

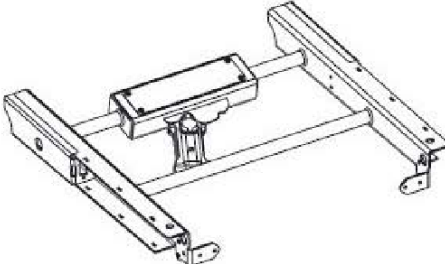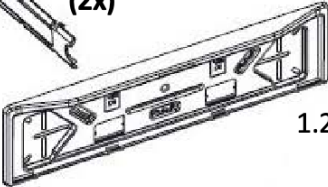1.240.198	1.240.139.XXX	1.240.199
		
	1.240.224	(4x) • 1.240.200
		
1.240.229	(2x)	(4x) • 1.240.241
		
1.240.170		
1.240.234	(4x)	(2x) • 1.240.239
		
1.240.242	(8x)	(2x) • 1.240.237
		
1.240.236	(2x)	(6x) • 1.240.240
		
	(2x)	(2x) • 1.240.238
		
1.240.190	(2x)	(2x) • 1.238.237
		
1.240.194	(4x)	(2x) • 1.240.206
		
1.240.191	(4x)	(2x) • 1.240.186
		
1.240.192	(8x)	(2x) • 1.240.193
		
	(4x) •	1.240.110
		
1.238.109	(4x)	
		
1.240.189		1.240.228
		
1.240.195		1.240.196
		
1.240.181	(2x)	• 1.240.203
		(2x) • 1.240.187
1.240.197	(2x)	• 1.240.204
		

Product warranty

Jopindo GmbH provides a two (2) year product warranty for this Minnid product under the following conditions. You must normally reside in Europe; the product must have been manufactured by Jopindo GmbH and sold as new; and you must have inspected it after purchase and reported any detected defects to the selling dealer. Claims arise where design, material or workmanship defects for which Jopindo GmbH is responsible significantly impair normal use. Impairment due to inadequate maintenance, incorrect or improper use, particular environmental influences or unusual operating conditions must be excluded. You must allow Jopindo GmbH to inspect the product on site.

Jopindo GmbH may, at its discretion, repair defective products, supply replacements or refund their current value. Current value means the original purchase price less 15 % for each year begun after purchase. Claims become time-barred within one year after notification to Jopindo GmbH. The two-year warranty period starts on purchase and is not extended by warranty measures.

This product warranty creates no further claims. In particular, damages claims are excluded unless Jopindo GmbH culpably harms life, body or health, or breaches other obligations intentionally or through gross negligence. Your contractual rights against the selling dealer, particularly rights relating to defects, remain unaffected.

Manufacturer and contact

Minnid
Jopindo GmbH
Massenheimer Weg 25
D-61352 Bad Homburg
www.minnid.com

Source edition: 1.240.600BA_20231120

Single-language edition | English