


User manual

e.carry

Bicycle carrier

1.240.070

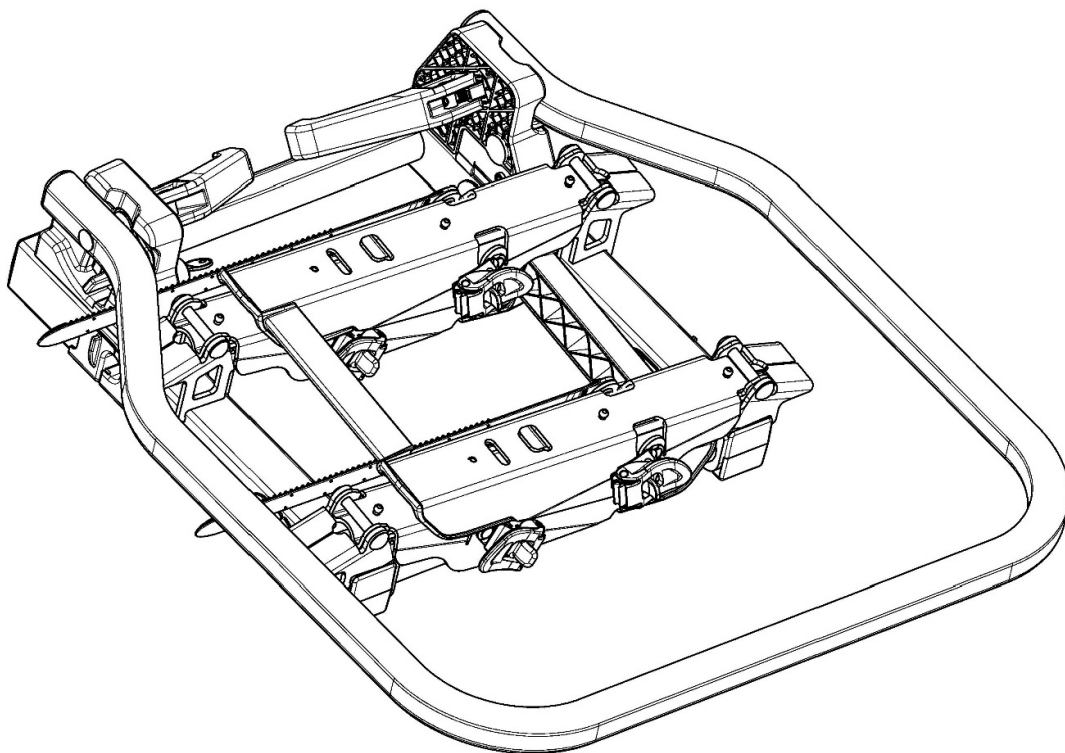

Minnid
Jopindo GmbH
Massenheimer Weg 25
D-61352 Bad Homburg
www.minnid.com

Single-language edition

Contents

Document and safety	3
Safe use	4
Before every journey	5
While driving	6
Product and accessories	7
Component overview	8
Installation e.carry	9
Illustrations Installation	10
Positioning the bicycles e.carry	11
Illustrations Positioning the bicycles	12
Aligning the bicycle holders safely e.carry	13
Securing frames and wheels e.carry	14
Illustrations Securing frames and wheels	15
Removal e.carry	16
Product warranty	17
Manufacturer and contact	18

Document and safety

These instructions form part of the product. Read them in full, follow all safety instructions and keep them accessible. Also follow the instructions for the vehicle, all carriers and accessories used, and the information on the type plate. Copyright protected; reproduction, reprinting and distribution require permission. Subject to change.

WARNING: a hazardous situation that may cause death or serious injury.

CAUTION: a situation that may cause minor or moderate injury.

NOTICE: a situation that may cause damage to property or the environment.

Symbols in the illustrations: red cross = incorrect; green tick = correct; eye = visual check. Numbers and arrows show the sequence and direction of movement. Letters identify components. Follow the actions in the order given in the text.

Safe use

Maximum carrying capacity: 70 kg

Failure to follow these instructions may cause injury or accidents. Use the product only when correctly installed and in perfect technical condition, on paved roads. Off-road use is prohibited. Do not use a damaged or independently modified product. Children and people unable to assess the hazards must not operate it. Any use other than that described is improper use.

e.carry is intended exclusively for attachment to e.base and the e.carry plus extension kit. For 2 suitable bicycles: no more than 70 kg in total or 35 kg per bicycle.

The driver is responsible for the vehicle and its load. National rules for securing and marking loads (e.g. a warning panel) take precedence and must always be followed. Do not exceed the vehicle's permissible axle loads or gross weight; consult the vehicle manual and registration documents. Also observe the load limits of every component used.

The manufacturer accepts no liability or warranty for damage caused by failure to follow the instructions, improper use or handling, unauthorised spare parts or unqualified repairs.

Before every journey

Check that the system and all accessories are correctly secured. Lock every lock. The lights and registration plate must be clearly visible from behind, and the driver must have an unobstructed view in every direction. If the vehicle's third brake light is obscured, fit a replacement third brake light. Place heavy luggage as far forward as possible in the luggage compartment to reduce rear loading.

If the load projects more than 380 mm sideways beyond the lamp carrier, adjust the lamp position where adjustable. If adjustment is insufficient, mark the load with a white light facing forwards and a red light facing rearwards, no more than 1500 mm above the road. Follow national regulations.

When carrying nothing, remove the detachable system and carry it, for example, in the luggage compartment. This reduces fuel consumption, makes parking easier and protects the product.

While driving

Observe the load regularly in the rear-view mirror. If it shifts, drive at reduced speed to the next suitable stopping place and check the attachments. Maximum speed: 130 km/h. Expect greater sensitivity to crosswinds and altered braking behaviour due to the load distribution. Do not drive off-road or enter a car wash with the system fitted. Check the system, accessories and load after approximately 10 km and every 500 km on longer journeys; check sooner on uneven roads.

Connecting the plug may automatically deactivate assistance systems such as parking sensors, parking assistance or the automatic tailgate. Consult the vehicle manual.

Product and accessories

Check the delivery is complete: product, keys and instructions.


Article / type	e.carry 1.240.070
Maximum carrying capacity	70 kg
Own weight	11 kg

Product and accessories


e.base	1.240.160
e.hit 120	1.240.060
e.hit 150	1.240.400
e.box	1.240.344
e.base XT	1.240.233

Component overview


A

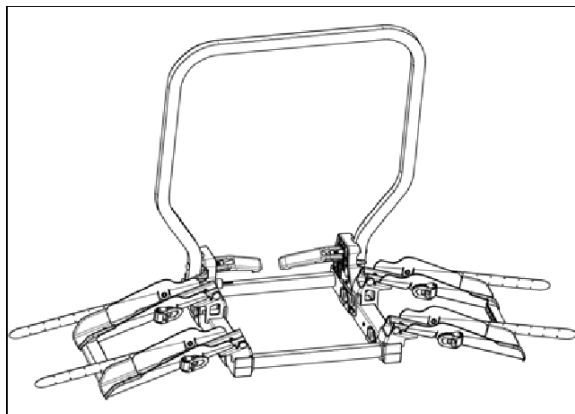


B

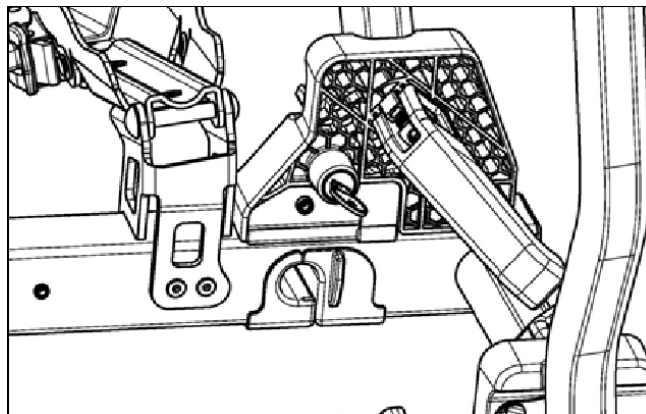

C

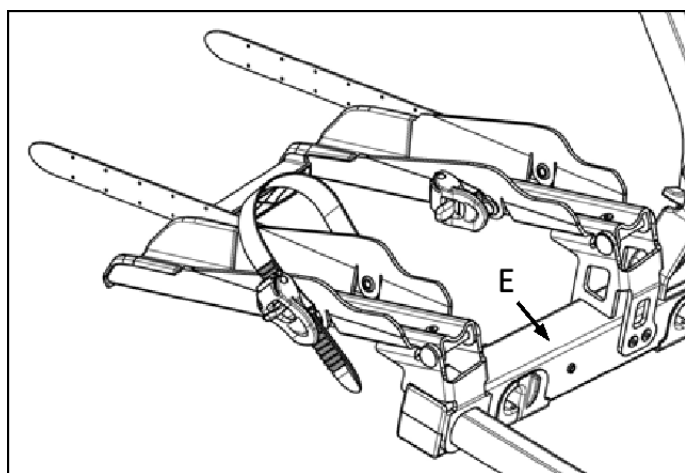


D

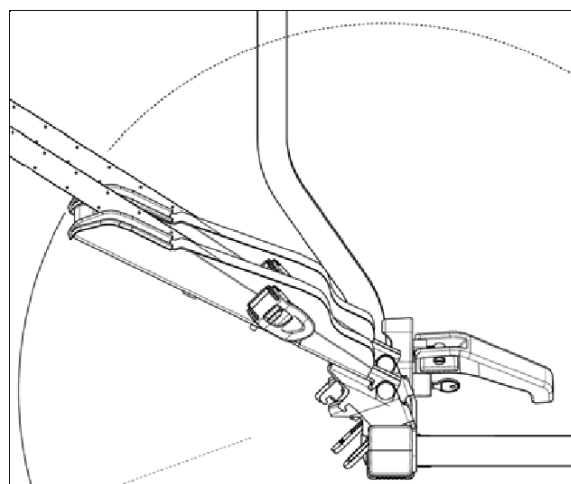


A	e.carry
B	Lock
C	Strap tensioner
D	Wheel tray folding mechanism
E	Type plate

Installation | e.carry


A

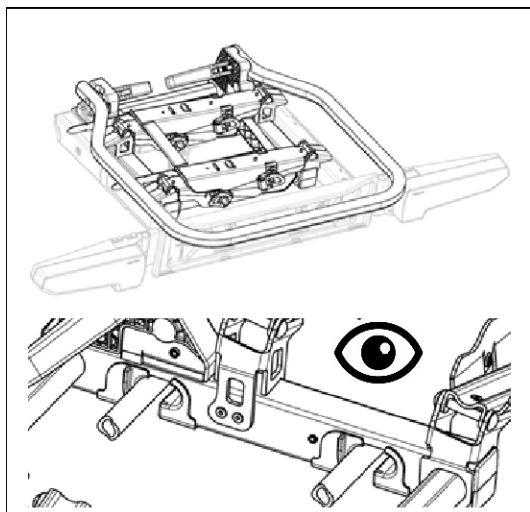

B

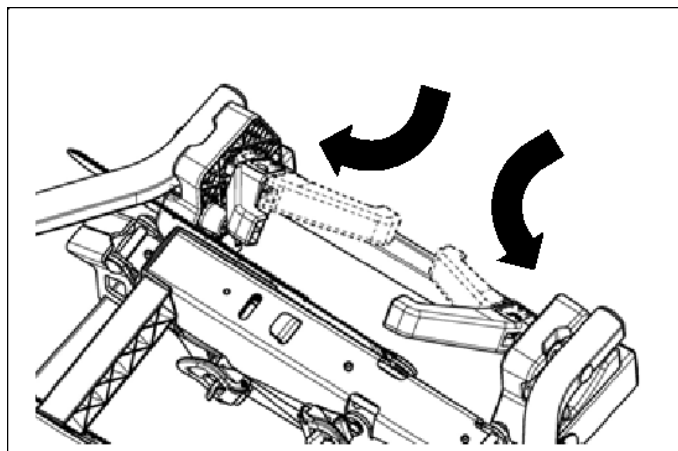


C

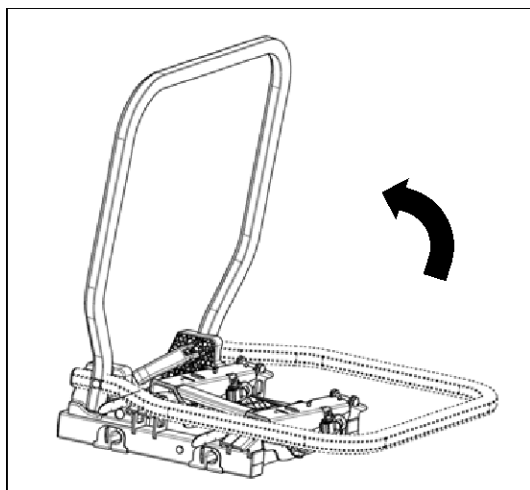


1. Place e.carry on e.base so that it engages at the mounting tubes. Check that it is correctly seated.
2. Open both clamping handles. Open the hoop to clamp the system. The mating parts must completely enclose the mounting tubes. Check the seating.
3. Close both clamping handles to secure the hoop. Check the attachment by pulling and pushing the securing hoop by hand in the X and Y directions.

Illustrations | Installation


D

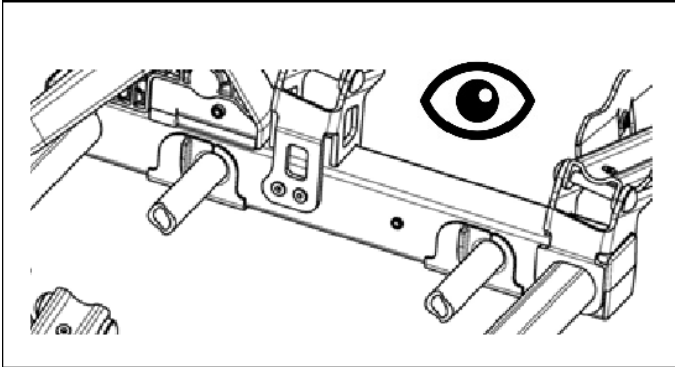

E

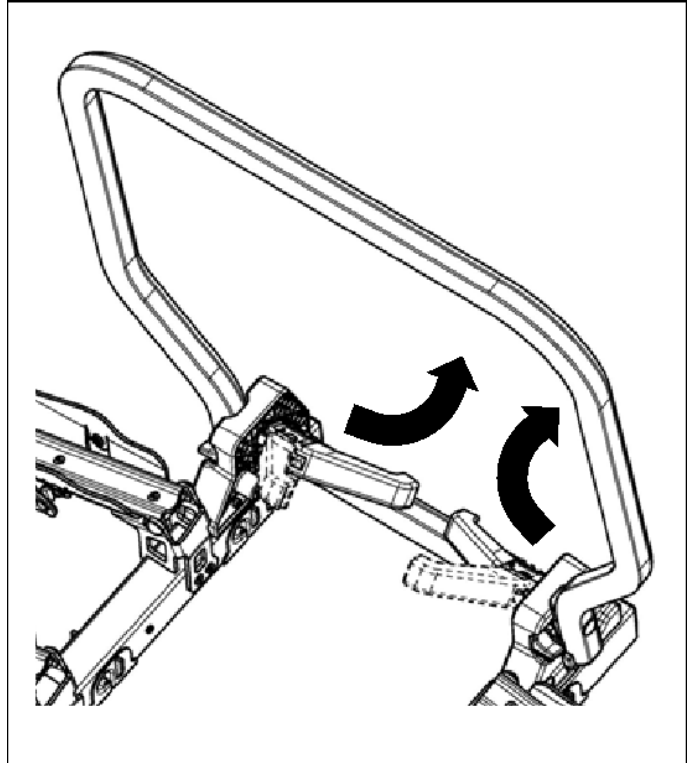

F

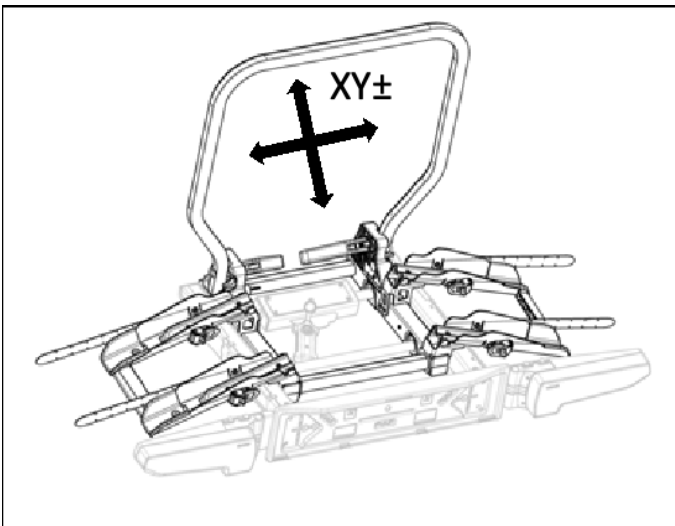


Positioning the bicycles | e.carry


A



B

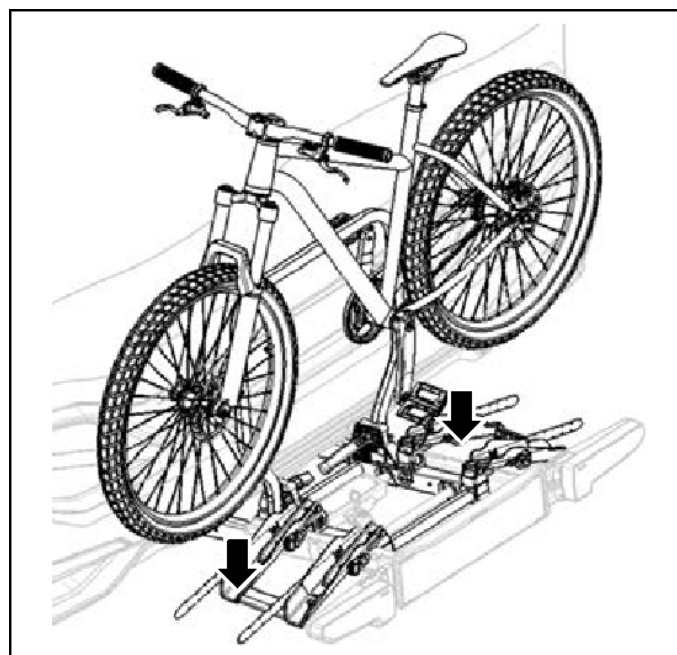

C

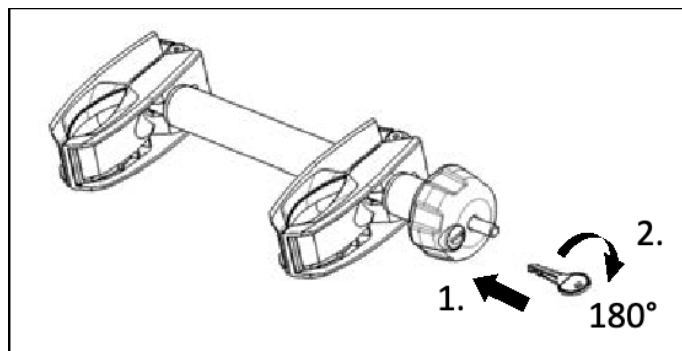


WARNING: falling parts can cause accidents. Before driving, remove all loose parts and additional fittings, such as drinks bottles, loose straps, pannier bags, baskets, batteries and child seats.

The bicycles must be suitable for the carrier. Mount two bicycles facing opposite directions, with the heavier one closer to the vehicle. A single bicycle must also be placed close to the vehicle.


1. Place the bicycle on the wheel rails.
2. Insert the key in the bicycle holder lock and unlock it.
3. Open the bicycle clamp by turning the wing nut.
4. Squeeze the bicycle clamp together to open the hoop clamp.

Illustrations | Positioning the bicycles


D

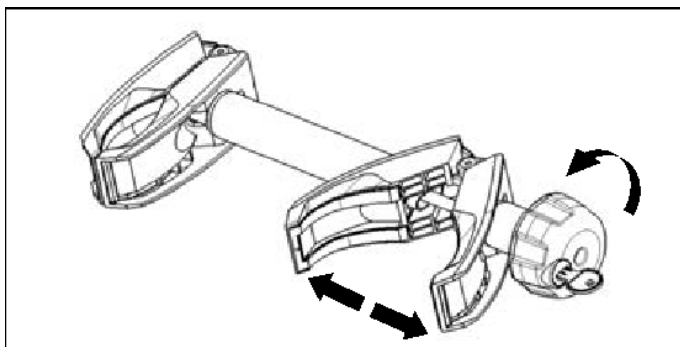

E

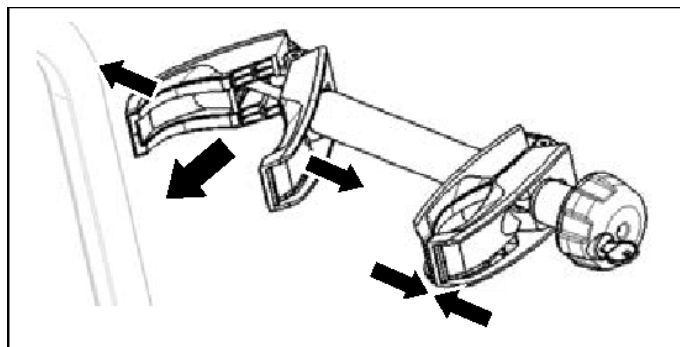

Aligning the bicycle holders safely | e.carry

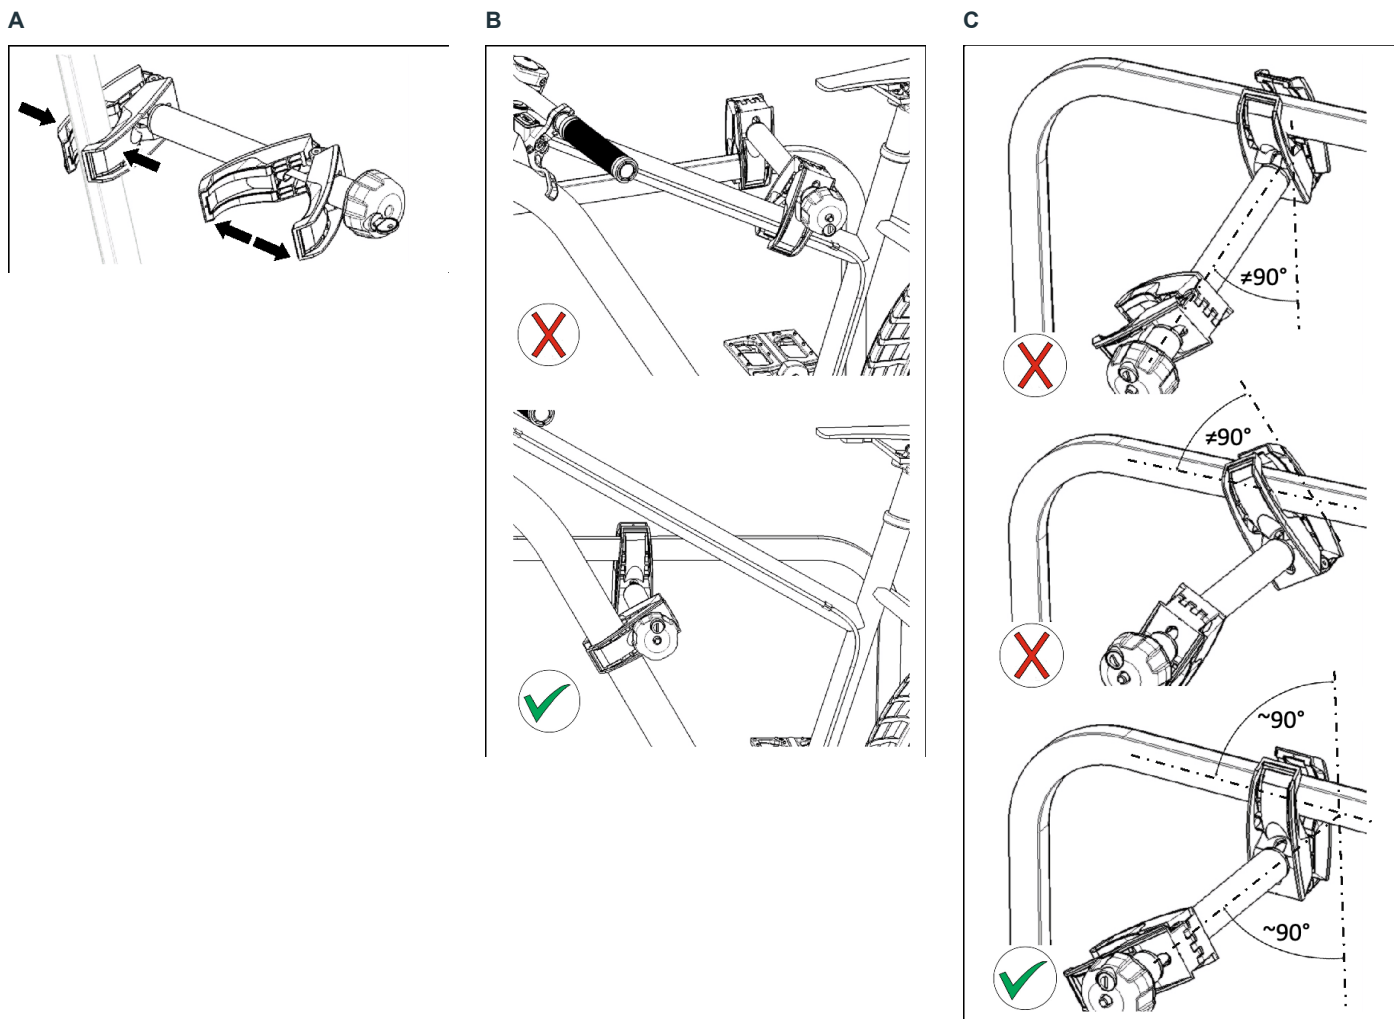


WARNING: an incorrectly fitted bicycle holder can allow the bicycle to tip over or fall off.

CAUTION: clamping can damage delicate parts, particularly gear and brake cables or carbon frames. Check that the frame is suitable. Attach the clamp only to the bicycle frame or seat tube and choose a secure position.

Attach the hoop clamp to the hoop by opening the bicycle clamp. Align the clamp correctly with the hoop and frame; follow the correct and incorrect angles shown in the illustrations. Replace defective clamps immediately.


Securing frames and wheels | e.carry

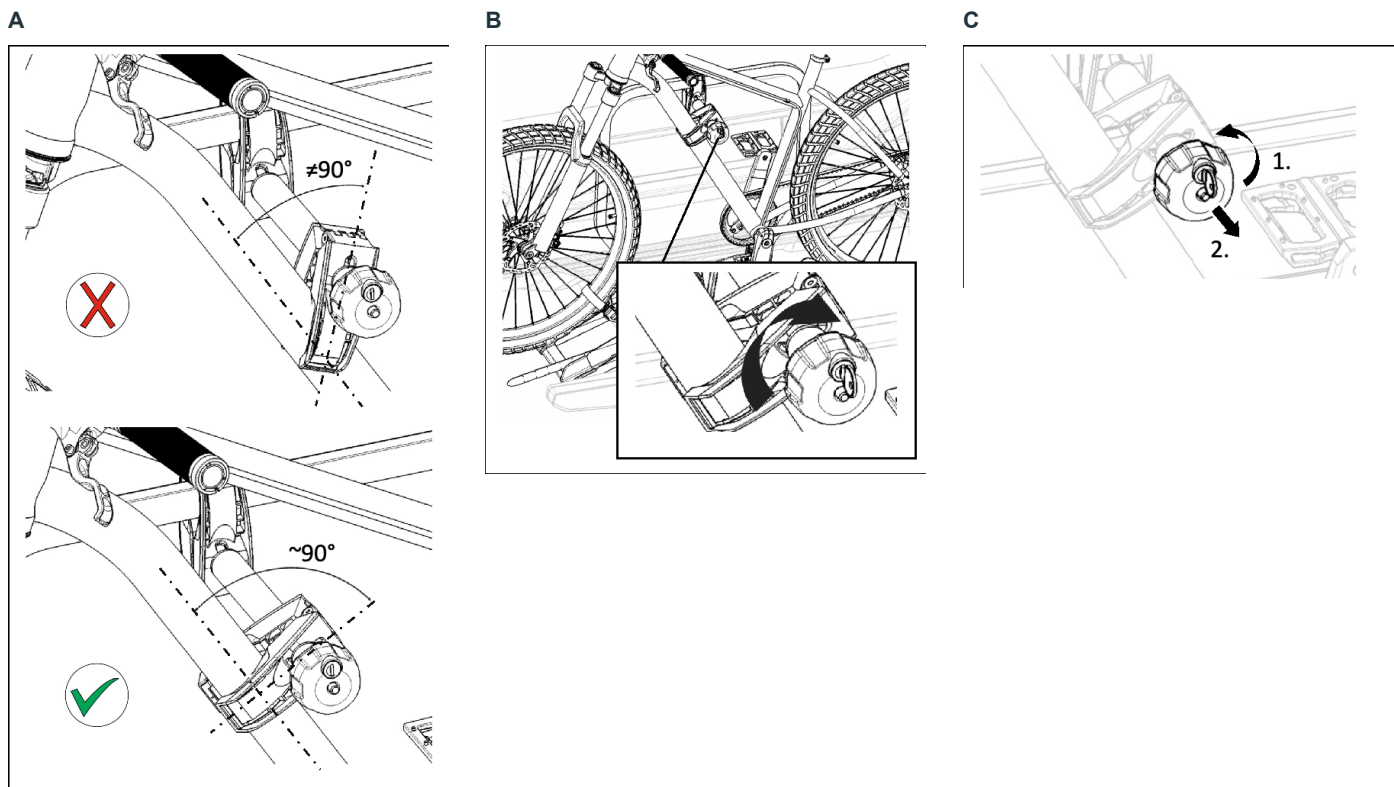


1. Align the bicycle holder with the hoop. Place the bicycle clamp around the frame and align it with the frame. Turn the wing nut to secure the bicycle.
2. Lock the bicycle holder and remove the key.
3. Press the toothed-strap release and pull the strap out of its buckle.
4. Pass a strap over each wheel rim. Each strap must lie centrally between the spokes. Feed it into the buckle and tension it by repeatedly moving the buckle up and down. Secure further bicycles in the same way.

Illustrations | Securing frames and wheels

D

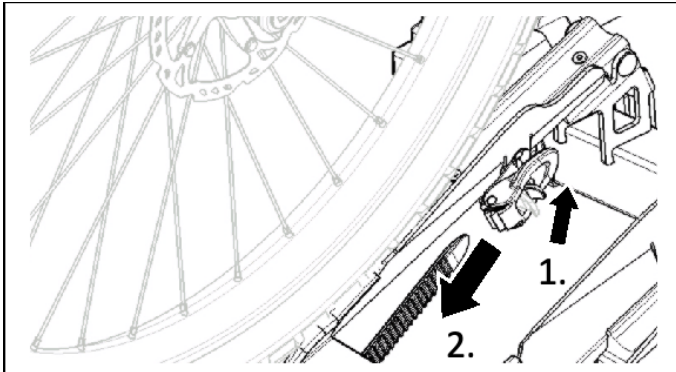


E

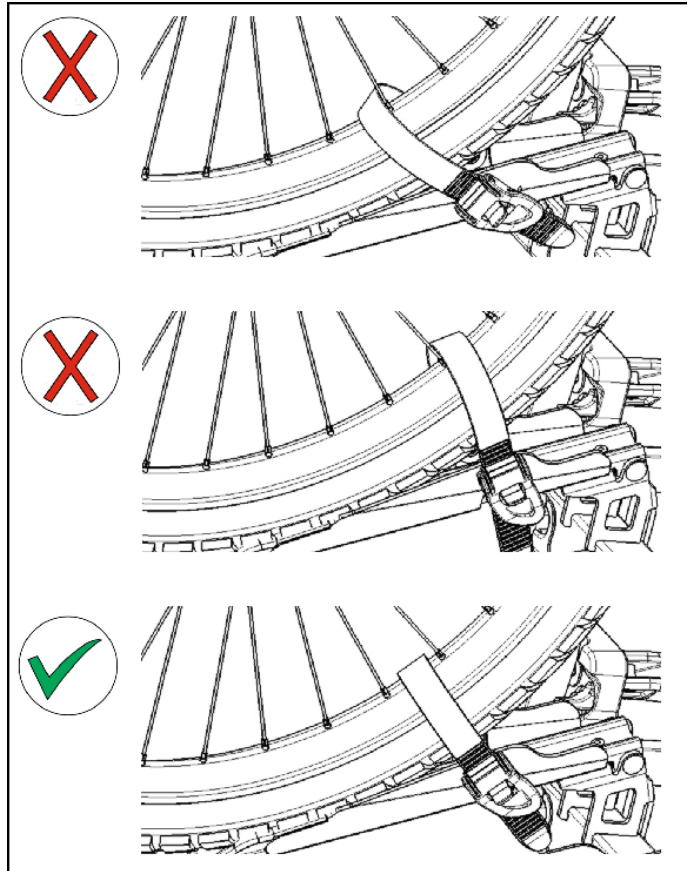


Removal | e.carry

A

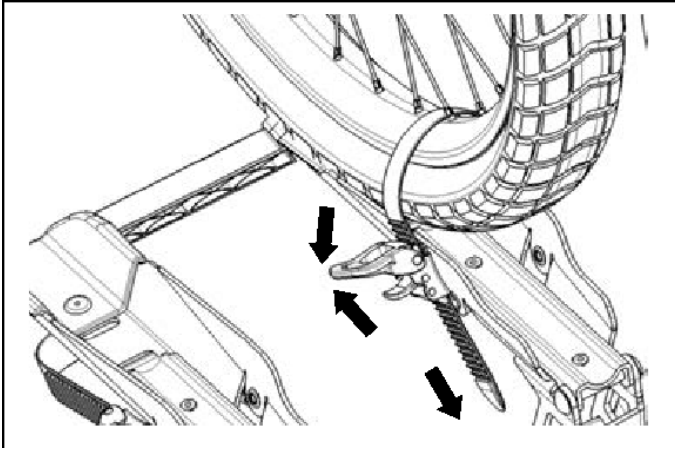

B

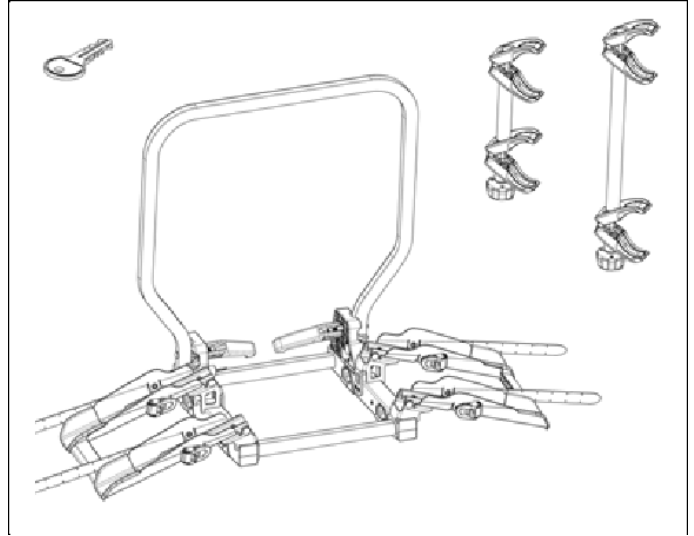

Remove the bicycles: unlock the bicycle holder. Turn the wing nut anticlockwise to open the clamp. Press the strap releases and pull the straps out of the buckles. Remove the bicycles, then the bicycle holders.

Remove the carrier: wrap the straps around the wheel supports and feed them into the buckles. Fold in the wheel rails. Release the clamping handles, rotate the hoop downwards and close the handles again. Lift e.carry out of e.base.

Product warranty

Jopindo GmbH provides a two (2) year product warranty for this Minnid product under the following conditions. You must normally reside in Europe; the product must have been manufactured by Jopindo GmbH and sold as new; and you must have inspected it after purchase and reported any detected defects to the selling dealer. Claims arise where design, material or workmanship defects for which Jopindo GmbH is responsible significantly impair normal use. Impairment due to inadequate maintenance, incorrect or improper use, particular environmental influences or unusual operating conditions must be excluded. You must allow Jopindo GmbH to inspect the product on site.

Jopindo GmbH may, at its discretion, repair defective products, supply replacements or refund their current value. Current value means the original purchase price less 15 % for each year begun after purchase. Claims become time-barred within one year after notification to Jopindo GmbH. The two-year warranty period starts on purchase and is not extended by warranty measures.

This product warranty creates no further claims. In particular, damages claims are excluded unless Jopindo GmbH culpably harms life, body or health, or breaches other obligations intentionally or through gross negligence. Your contractual rights against the selling dealer, particularly rights relating to defects, remain unaffected.

Manufacturer and contact

Minnid
Jopindo GmbH
Massenheimer Weg 25
D-61352 Bad Homburg
www.minnid.com

Source edition: 1.240.070BA_20231117

Single-language edition | English