


User manual

swivel-carrier

swivel-carrier

SWT-LB... / SWT-RB...

1.240.961.L... / 1.260.090.L...

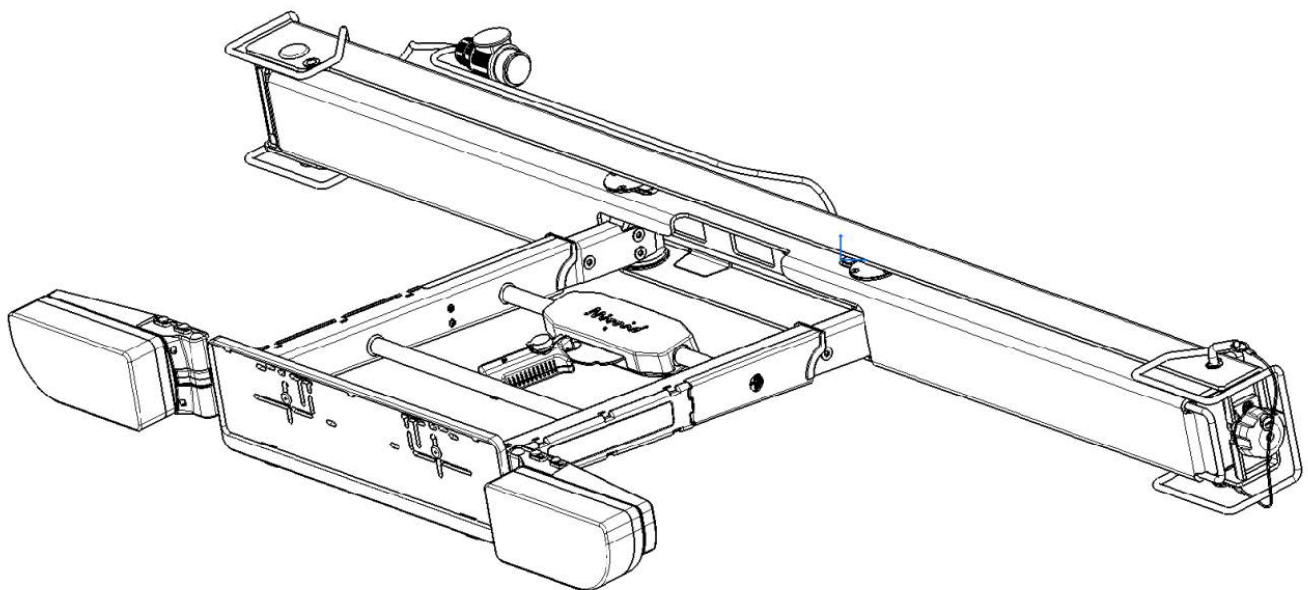

Minnid
Jopindo GmbH
Massenheimer Weg 25
D-61352 Bad Homburg
www.minnid.com

Single-language edition

Contents

Document and safety	3
Safe use	4
Before every journey	5
While driving	6
Product and accessories	7
Component overview	8
Installation swivel-carrier	9
Illustrations Installation	10
Activating the carrier system swivel-carrier	11
Illustrations Activating the carrier system	12
Swinging open and stowing swivel-carrier	13
Maintenance and care	14
Spare parts	15
Spare parts	16
Product warranty	17
Manufacturer and contact	18

Document and safety

These instructions form part of the product. Read them in full, follow all safety instructions and keep them accessible. Also follow the instructions for the vehicle, all carriers and accessories used, and the information on the type plate. Copyright protected; reproduction, reprinting and distribution require permission. Subject to change.

WARNING: a hazardous situation that may cause death or serious injury.

CAUTION: a situation that may cause minor or moderate injury.

NOTICE: a situation that may cause damage to property or the environment.

Symbols in the illustrations: red cross = incorrect; green tick = correct; eye = visual check. Numbers and arrows show the sequence and direction of movement. Letters identify components. Follow the actions in the order given in the text.

Safe use

Maximum carrying capacity: 150 kg

Failure to follow these instructions may cause injury or accidents. Use the product only when correctly installed and in perfect technical condition, on paved roads. Off-road use is prohibited. Do not use a damaged or independently modified product. Children and people unable to assess the hazards must not operate it. Any use other than that described is improper use.

Use the swivel-carrier only with the listed accessories suitable for the vehicle. Maximum carrying capacity: 150 kg, including fitted accessories. The configuration and arm length depend on the vehicle.

The driver is responsible for the vehicle and its load. National rules for securing and marking loads (e.g. a warning panel) take precedence and must always be followed. Do not exceed the vehicle's permissible axle loads or gross weight; consult the vehicle manual and registration documents. Also observe the load limits of every component used.

The manufacturer accepts no liability or warranty for damage caused by failure to follow the instructions, improper use or handling, unauthorised spare parts or unqualified repairs.

Before every journey

Check that the system and all accessories are correctly secured. Lock every lock. The lights and registration plate must be clearly visible from behind, and the driver must have an unobstructed view in every direction. If the vehicle's third brake light is obscured, fit a replacement third brake light. Place heavy luggage as far forward as possible in the luggage compartment to reduce rear loading.

Without accessories: fold in the attachment arms and close their opening with the cover. Close the swivel arm, insert the locking pin and spring clip, tighten the knob by hand and lock it.

With accessories: remove the cover, unfold the attachment arms and fit the accessories correctly. Close the swivel arm and secure it with the pin and spring clip; lock all locks.

The load should project no more than 380 mm beyond the lamp carrier; overall width must not exceed 2550 mm. Adjust the e.base lamps where necessary and follow the load-marking instructions. Avoid poor road surfaces. If using the carrier's rear fog light, deactivate the vehicle's rear fog light.

If the load projects more than 380 mm sideways beyond the lamp carrier, adjust the lamp position where adjustable. If adjustment is insufficient, mark the load with a white light facing forwards and a red light facing rearwards, no more than 1500 mm above the road. Follow national regulations.

While driving

Observe the load regularly in the rear-view mirror. If it shifts, drive at reduced speed to the next suitable stopping place and check the attachments. Maximum speed: 130 km/h. Expect greater sensitivity to crosswinds and altered braking behaviour due to the load distribution. Do not drive off-road or enter a car wash with the system fitted. Check the system, accessories and load after approximately 10 km and every 500 km on longer journeys; check sooner on uneven roads.

Connecting the plug may automatically deactivate assistance systems such as parking sensors, parking assistance or the automatic tailgate. Consult the vehicle manual.

Product and accessories

Check the delivery is complete: product, keys and instructions.


Article / type	swivel-carrier SWT-LB... / SWT-RB... 1.240.961.L... / 1.260.090.L...
left / right	SWT-LB...: 1.240.961.L... SWT-RB...: 1.260.090.L...
Maximum carrying capacity	150 kg
Marking on the illustrated type plate	E13 26R-04 8641 1.240.961.L1800

Product and accessories


Vehicle mounting brackets / crossmember: version depends on the vehicle.	1.240.962-963 / 1.260.019
e.base (LED) 1.240.160	Vehicle width up to 2350 mm
e.base light 1.260.086 / 1.260.120 / 1.260.130	Vehicle width up to 1820 / 2050 / 2260 mm
e.carry	1.240.070
e.box	1.240.344
e.base XT	1.240.233

Component overview

A-L

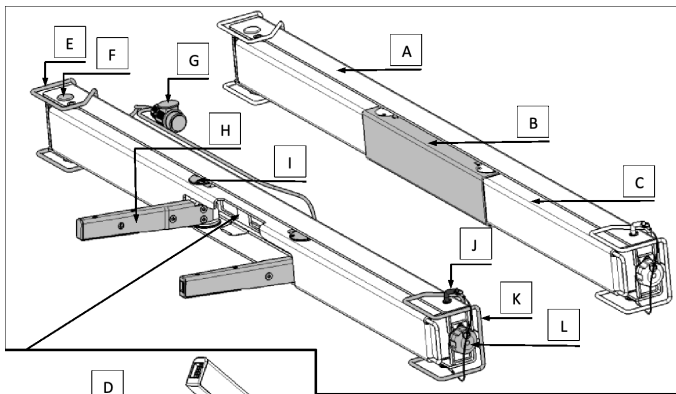


D

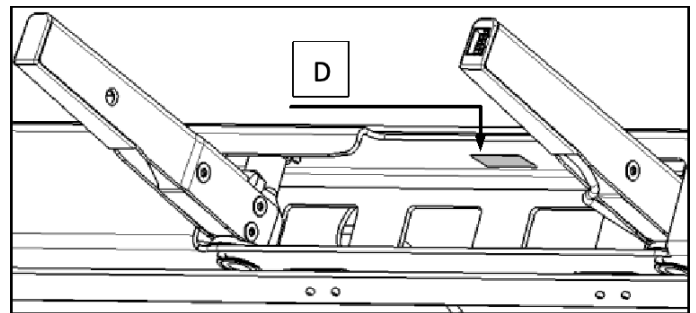


A	Carrier assembly
B	Cover
C	Swivel-arm assembly
D	Type plate
E	Protective bracket assembly
F	Main bearing
G	Wiring harness
H	Attachment arms
I	Attachment-arm bearing
J	Locking pin with retaining clip
K	Protective bracket assembly
L	Knob with lock

Installation | swivel-carrier


A

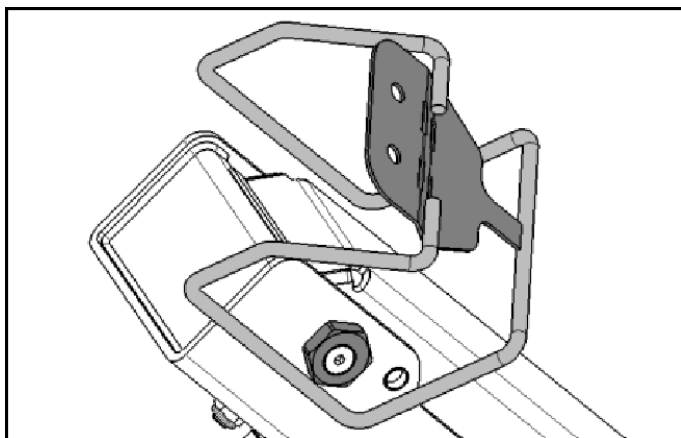

B

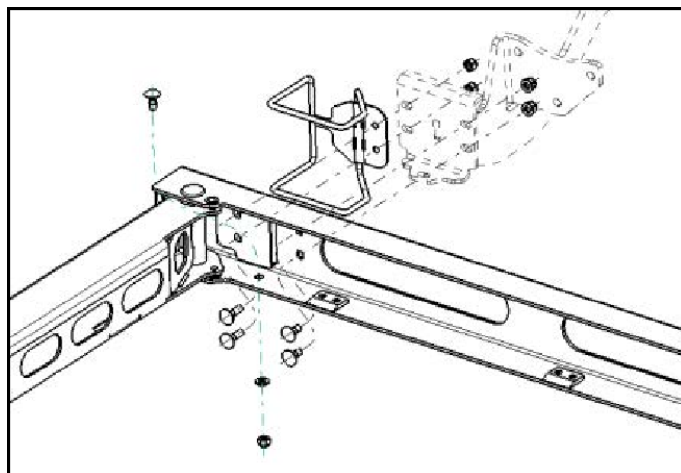


C

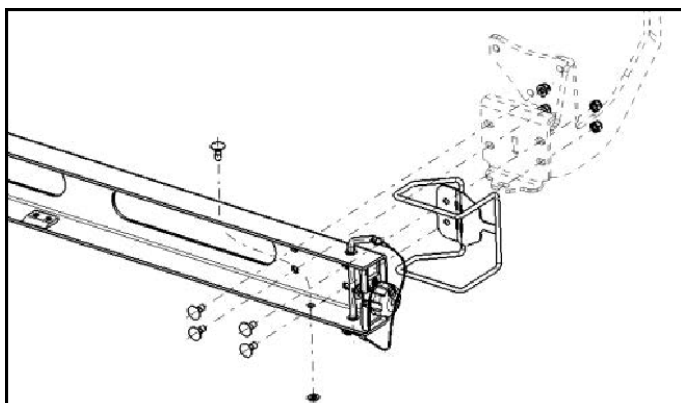


Pivot side: fit the protective bracket from below over the eccentric nut at the front, then rotate it 180° to the rear. Place the open swivel-carrier on the vehicle mounting brackets and secure it with the supplied bolt set. Latch side: secure the open swivel-carrier to the vehicle mounting bracket with the supplied bolt set. Place the cover over the projecting lugs of the upper attachment-arm bearing. Swing the arm closed. Insert the locking pin and secure it with the spring clip. Activate the knob by turning the key clockwise. Tighten the knob by hand. Deactivate it by turning the key anticlockwise and remove the key.

Illustrations | Installation




D

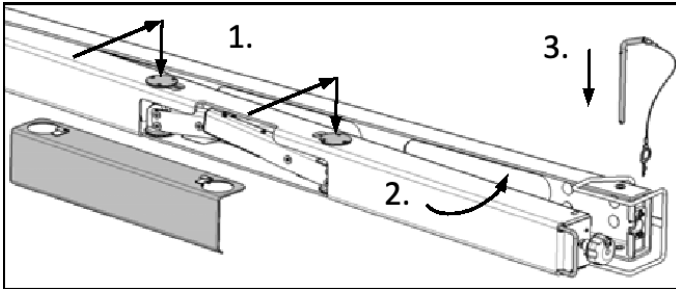

E

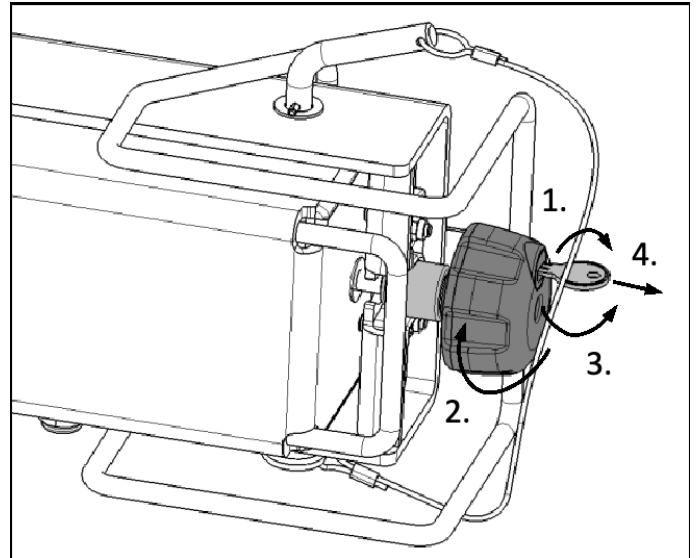


Activating the carrier system | swivel-carrier

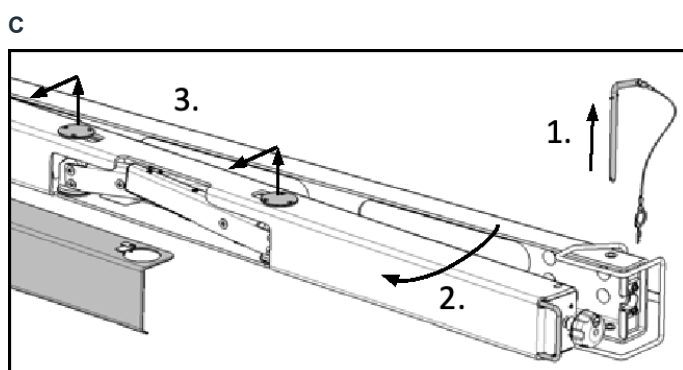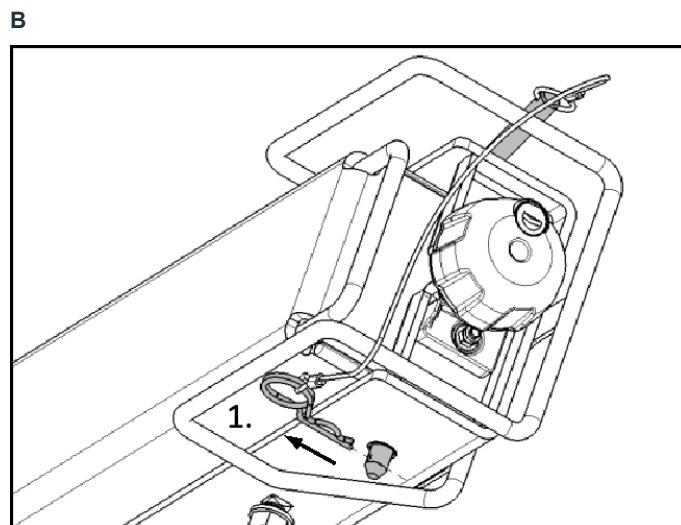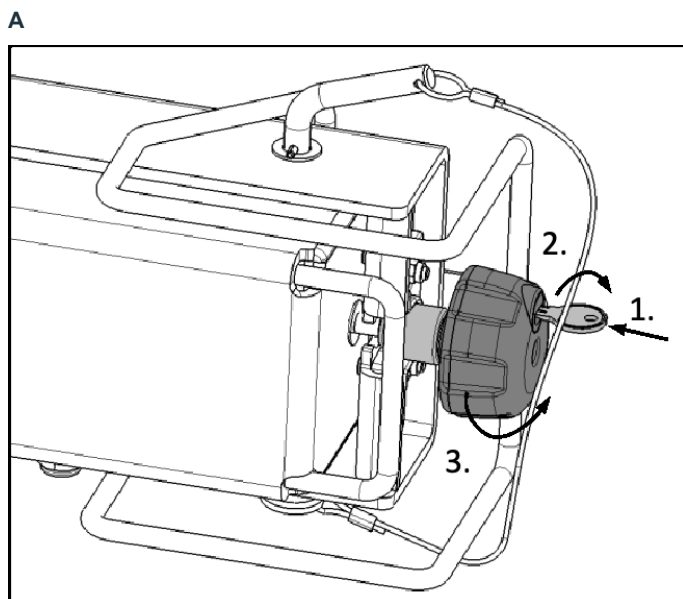


1. Insert the key and activate the knob by turning the key clockwise. Release the latch by turning the knob anticlockwise approximately five turns.
2. Remove the spring clip and withdraw the locking pin. Swing the carrier open by at least 5°.
3. Remove the cover and store it in the luggage compartment.
4. Swing the arm closed, insert the locking pin and secure it with the spring clip. Fold out the attachment arms until they engage in the open position.
5. Activate the knob with the key, tighten it by hand, deactivate it by turning the key anticlockwise and remove the key.

Illustrations | Activating the carrier system


D

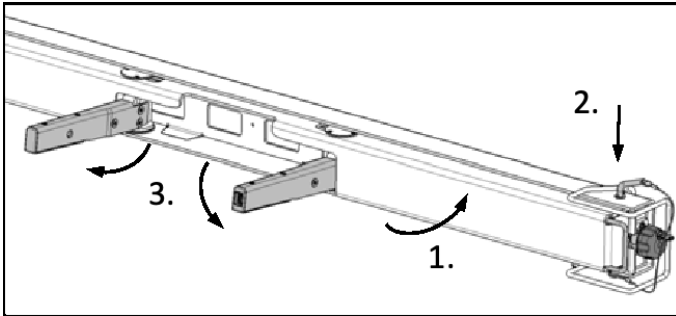

E

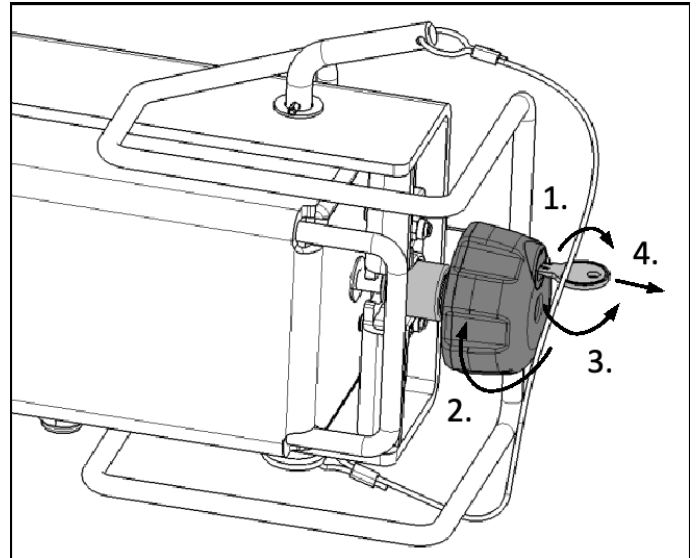

Swinging open and stowing | swivel-carrier

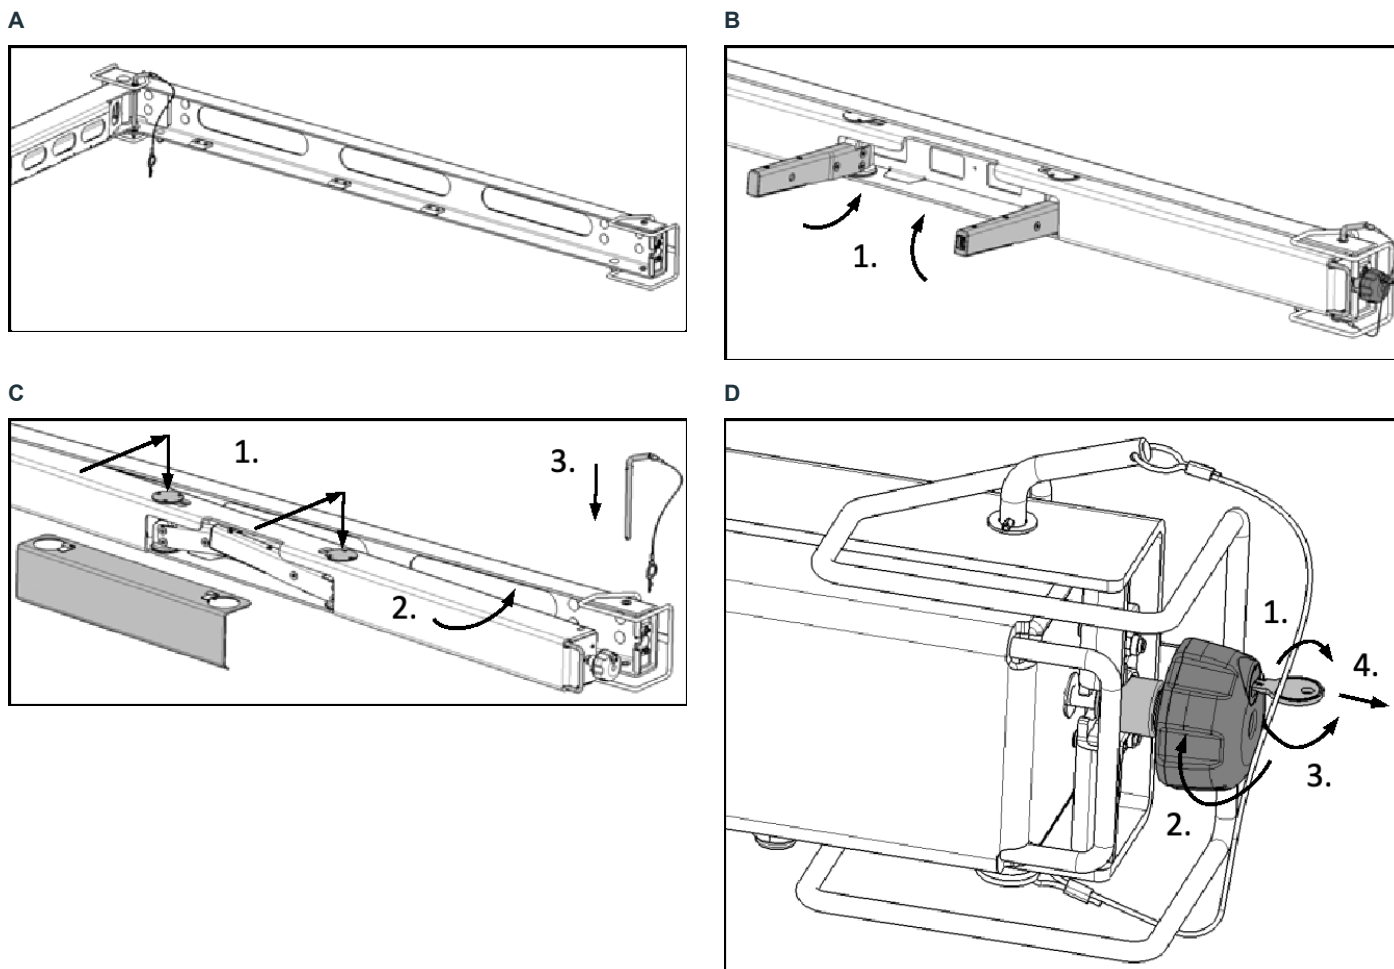


For access to the rear of the vehicle, the carrier can swing open up to 90°. First release the latch and remove the spring clip and locking pin as described. At 90°, use the locking pin to secure the carrier against swinging closed unintentionally. Close and secure it fully before driving.

To deactivate: fold the attachment arms in until they engage in the closed position. Place the cover over the projecting lugs of the upper bearing. Swing the arm closed. Insert the locking pin and secure it with the spring clip. Activate the knob by turning the key clockwise, tighten it by hand, deactivate it by turning the key anticlockwise and remove the key.



Maintenance and care

NOTICE: pressure washers, abrasive cleaners and aggressive detergents can cause damage. Clean the product regularly with water and car shampoo. Remove salt and dirt after winter use. Spray the lock with resin-free oil every 100 locking cycles, and at least every 2 months, then operate it several times.

Spare parts

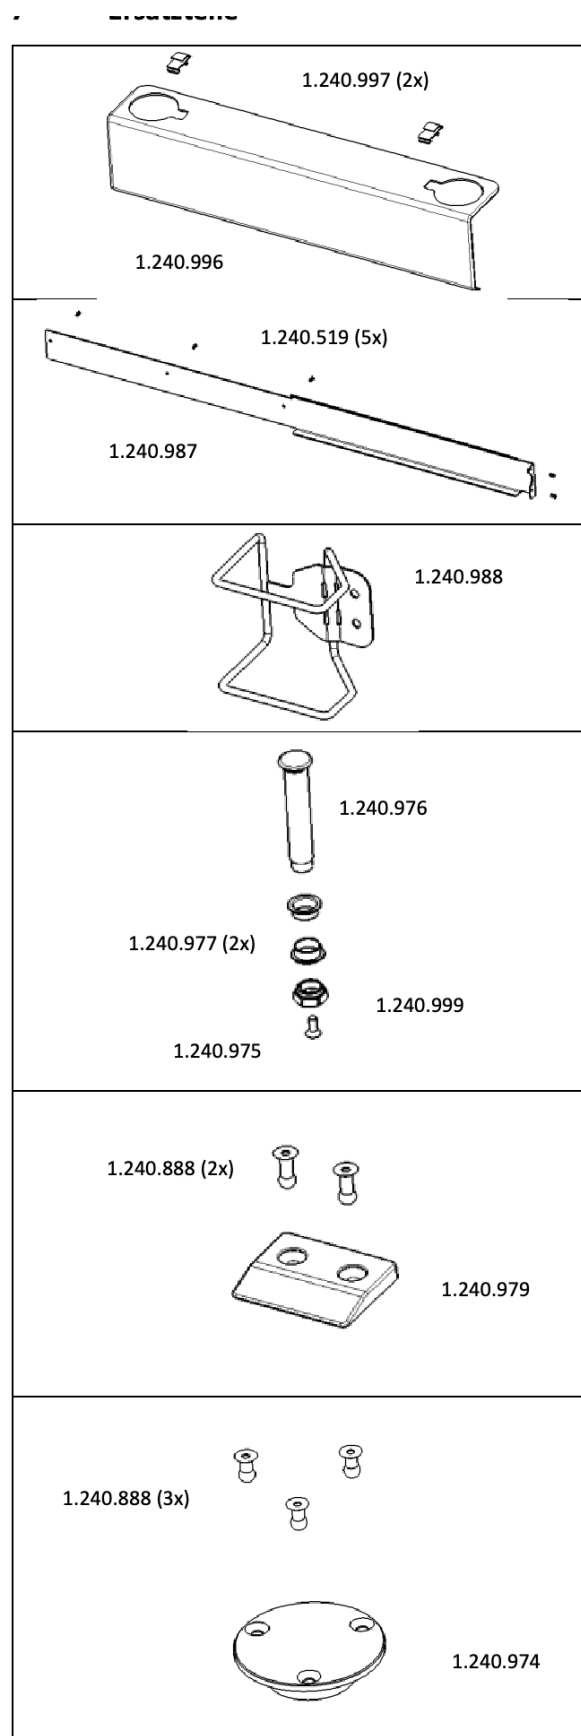

Spare parts

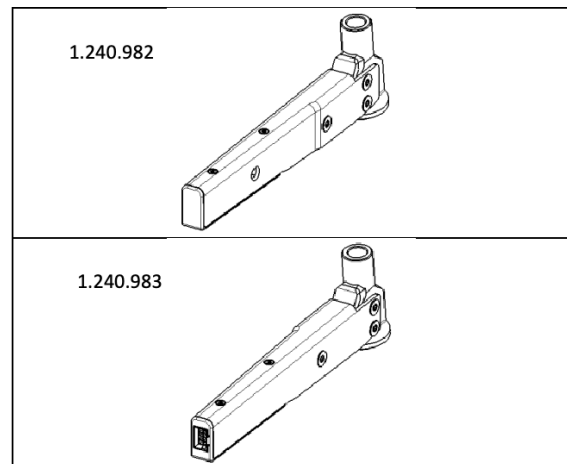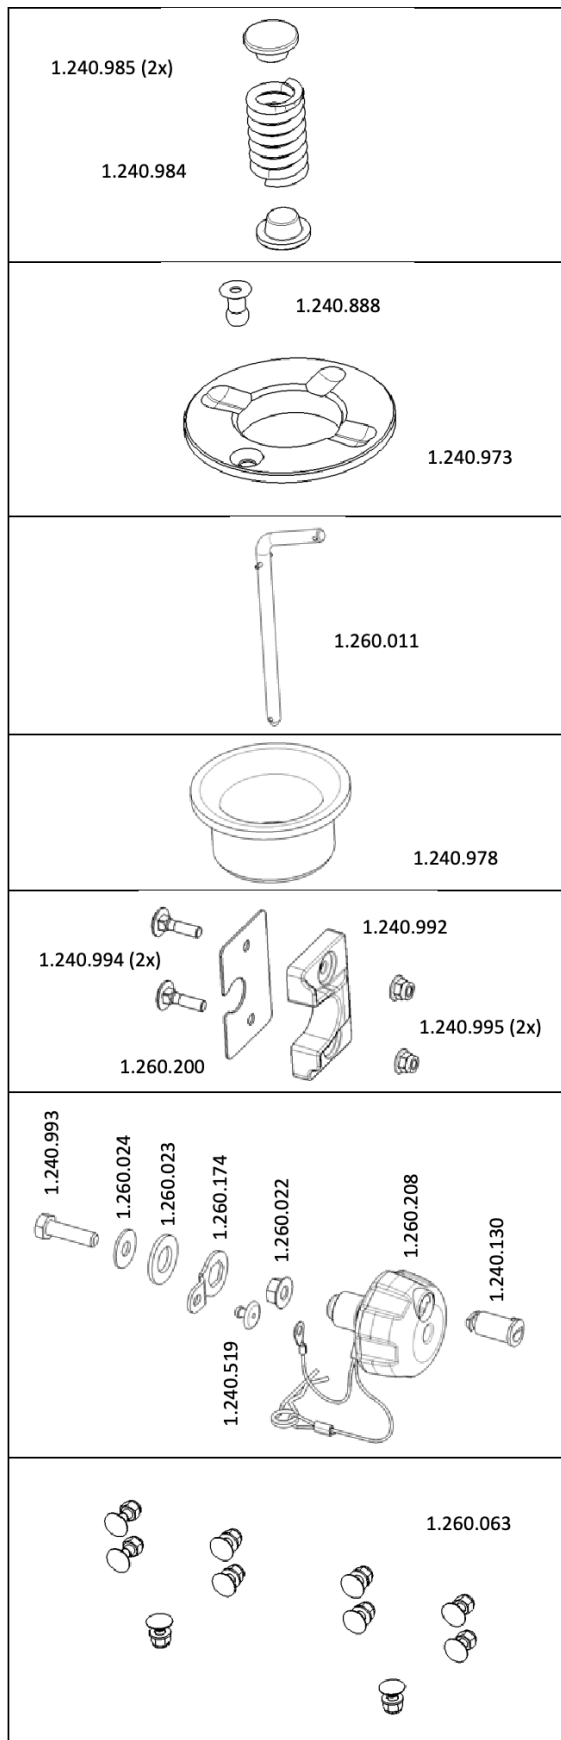

Product warranty

Jopindo GmbH provides a two (2) year product warranty for this Minnid product under the following conditions. You must normally reside in Europe; the product must have been manufactured by Jopindo GmbH and sold as new; and you must have inspected it after purchase and reported any detected defects to the selling dealer. Claims arise where design, material or workmanship defects for which Jopindo GmbH is responsible significantly impair normal use. Impairment due to inadequate maintenance, incorrect or improper use, particular environmental influences or unusual operating conditions must be excluded. You must allow Jopindo GmbH to inspect the product on site.

Jopindo GmbH may, at its discretion, repair defective products, supply replacements or refund their current value. Current value means the original purchase price less 15 % for each year begun after purchase. Claims become time-barred within one year after notification to Jopindo GmbH. The two-year warranty period starts on purchase and is not extended by warranty measures.

This product warranty creates no further claims. In particular, damages claims are excluded unless Jopindo GmbH culpably harms life, body or health, or breaches other obligations intentionally or through gross negligence. Your contractual rights against the selling dealer, particularly rights relating to defects, remain unaffected.

Manufacturer and contact

Minnid
Jopindo GmbH
Massenheimer Weg 25
D-61352 Bad Homburg
www.minnid.com

Source edition: 1.240.961BA_20231120

Single-language edition | English